

The Engineers Pocket Guide Communications

Data Communications, Industrial Networking TCP/IP and Fiber Optics



Foreword

FOAX training series specializes in providing high quality state-of-the-art technical training workshops to engineers, technicians and domain specialists throughout the country. Many engineers have attended FOAX's workshops over the past 10 years. The tremendous success of the technical training workshops is based in part on the enormous investment FOAX puts into constant review and updating of the workshops, an unwavering commitment to the highest quality standards and most importantly - enthusiastic, experienced FOAX engineers who present the workshops and keep up-to-date with consultancy work.

The objective of this booklet is to provide today's engineer with useful technical information and as an aide-memoir when you need to refresh your memory. This edition of the Pocket Guide Series has been updated to include new information including Telecommunications, TCP/IP and FieldBus and DeviceNetworks. Concepts that are important and useful to the engineers, technicians and students, independent of discipline, are covered in this useful booklet.

Contents

Chapter 1 - Data Communications

1
2
2
5
5
5
7

Chapter 2 - Industrial Networking and TCP/IP

Introduction	9
The Open Systems Interconnection Model	9
Network Topologies	10
Access Control	12
Main LAN Standards	14
Ethernet Standards	14
802.3 CSMA/CD Hardware Requirements	15
The TCP/IP Protocol Structure	16
Transmission Control Protocol (TCP)	

Chapter 3 - Theory of Fiber Optic Transmission

Construction of an Optical Fiber	19
Fresnel Reflection	21
The Light Transmission Nature of Glass	21
Numerical Aperture	22
Modal Propogation in Fibers	23
A Comparison of Data Rate, Distance and Fiber Type	26

Appendices

Appendix A: Glossary of Terms	27
Appendix B: ASCII Tables	59
Appendix C: EIA Communication Interface Standards	
Appendix D: Units and Abbreviations	
Appendix E: Commonly Used Formulae	



Chapter 1 Data Communications

There are two main issues to consider in data communications:

- the interface standard (e.g. the physical wiring and voltage consideration)
- the software protocol (e.g. the order and type of characters being transmitted)

Before discussing this, a few brief words are necessary on the format of data on a serial link.

Format of Data Communication Messages

For a simple asynchronous system such as RS-232, it is common practice to send one character at a time. The format of a typical character frame is indicated in Figure 1.1.




Figure 1.1 Format of a Typical Serial Asynchronous Data Character

Initially the data communications link is in the idle state: the line is in the mark state, held to a constant negative voltage.

The parity bit included at the end of the character is effectively a fingerprint of the character to enable the receiver to identify whether any errors have occurred in the transmission. For example, even parity means that the total number of logic 1 bits in the data together with the associated parity bit must be an even number.

In summary, the optional settings for asynchronous transmission of characters are:

Start Bits	1
Data Bits	5, 6, 7, 8
Parity Bits	even, odd, mark, space or none
Stop Bits	1, $1^{1}/2$ or 2

Baud Rate vs Data Transfer Rate

Data transfer rates are measured in bits per second (bps). This is an indication of the useful data that has been transmitted from the transmitter to the receiver. For example, in Figure 1.1 the useful data is only seven bits, whilst the total number of bits (or signal changes) amounts to ten. The additional three bits are overhead bits.

Baud rate refers to the number of signal changes per second, irrespective of the presence of any useful data in the bit stream.

The RS-232 Standard

The EIA RS-232 standard is the best known of the serial data interface standards. It is equivalent to the CCITT V.24 Interface.

The RS-232 Interface was developed for a single purpose and is defined as the 'Interface between Data Terminal Equipment (DTE) and Data Communication Equipment (DCE) employing serial binary data interchanges'.

DTE relates to a device which transmits data on pin 2 and receives data on pin 3 (for a 25 pin connector). A computer is an example of a DTE device.


DCE relates to a device which transmits data on pin 3 and receives data on pin 2 (for a 25 pin connector). An example of a DCE device is a modem.

A connection between two devices is shown in Figure 1.2. One device is a microcomputer and the other a modem. There are effectively two types of connecting lines:

- data lines (pin numbers 2, 3) which transmit useful data.
 - control lines (pin numbers 4, 5, 6, 8, 20, 22) which are used to control the flow of data between the two devices, commonly known as hardware handshaking.

- 2 -

In addition, the Signal Ground common (pin number 7) is used by the data and control lines.

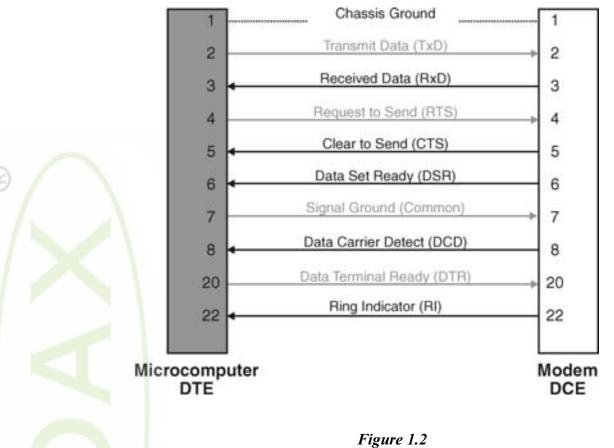

Pin Assignments Between a DTE and a DCE Device (25 Pin Connector)

Pin No	DB9 Connector RS232 Pin Assignment	DB25 Connector RS232 Pin Assignment
1	Received Line Signal	Shield
2	Received Data	Transmitted Data
3	Transmitted Data	Received Data
4	DTE Ready	Request to Send
5	Signal Common/Ground	Clear to Send
6	DCE Ready	DCE Ready
7	Request to Send	Signal Ground/Common
8	Clear to Send	Received Line Signal
9	Ring Indicator	+ Voltage (testing)
10		- Voltage (testing)
11		Unassigned
12		Sec Received Line Signal
		Detector/Data Signal
13		Sec Clear to Send
14		Sec Transmitted Data
15		Transmitter Signal DCE
		Element Timing
16		Sec Received Data
17		Receiver Signal DCE
		Element Timing
18		Local Loopback
19		Sec Request to Send
20		DTE Ready
21		Remote Loopback/Signal
		Quality Detector
22		Ring Indicator
23		Data Signal Rate
24		Transmit Signal DTE
		Element Timing
25		Test Mode

Table 1.1Common DB9 and DB25 Pin Assignments for a DTE for RS-232

4

Functional Description of the Interchange Circuit

The circuit functions are defined with reference to the DTE as follows:

Protective Ground (Shield)	The protective ground ensures that the DTE and DCE chassis are at equal potential. The DCE chassis MUST NOT be tied to ground separately.
Transmitted Data (TXD)	This line carries serial data from the DTE to the corresponding pin on the DCE. The line is held at a negative voltage during periods of line idle.
Received Data (RXD)	This line carries serial data from the DCE to the corresponding pin on the DTE.
Request to Send (RTS)	See Clear to Send (CTS) for a description.
Clear to Send (CTS)	When a half duplex modem is receiving from another modem, the DTE keeps RTS inhibited. When it is the DTE's turn to transmit, it advises the modem by asserting the RTS pin. When the modem asserts the CTS, it informs the DTE that it is now safe to send data. The procedure is reversed when switching from transmit to receive.
Data Set Ready (DSR)	This is also called DCE Ready. In the answer mode, the answer tone and the Data Set Ready are asserted two seconds after the telephone goes off-hook.
Signal Ground (Common)	This is the common return line for the data Transmit and Receive signals. The connection between the two ends is always made.
Data Carrier Detect (DCD)	This is also called the Received Line Signal Detector. It is asserted by the modem when it receives a remote carrier and remains asserted for the duration of the link.
DTE Ready	DTE Ready enables (but does not cause) the
(or Data Terminal Ready)	modem to switch onto the line. In originate mode, DTE Ready must be asserted for the duration of the link.
Ring Indicator	This pin is asserted during a ring on the line.
Data Signal Rate Selector (DSRS)	When two data rates are possible, the higher is selected by asserting DSRS.

Table 1.2Circuit Functions

— 5 —


The RS-422 Standard

The RS-422 standard introduced in the early 1970s defines a balanced (or differential) data communications interface using two separate wires for each signal. Due to the high noise immunity of the RS-422 standard, high data speeds and long distances can be achieved.

The RS-422 specification allows reliable serial data communications for:

- distances of up to 1200 metres
- data rates of up to 10 Mbps

Only one line driver is allowed on a line, and up to ten line receivers can be driven by it. Figure 1.3 illustrates RS-422.

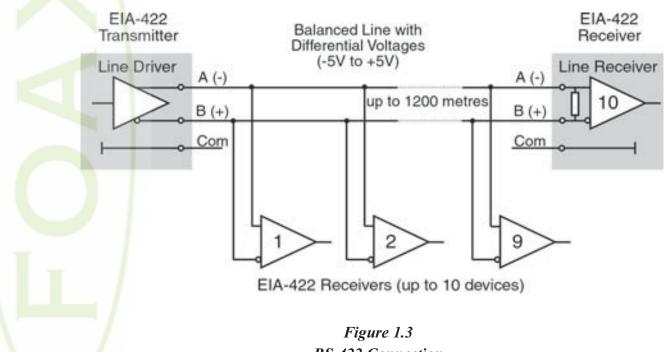

RS-422 Connection

The RS-485 Standard


RS-485 is the most versatile of the EIA standards and is an expansion of the RS-422 standard. It allows the same distance and data speed but increases the number of transmitters and receivers permitted on a line.

RS-485 permits multi-drop network communications on two wires and allows up to 32 line drivers and line receivers on the same line. An additional ground reference line is often included with the two RS-485 wires.

Each transmitter has the feature of tri-state operation with three states:

- Logic 0
- Logic 1
- High impedance (or disconnected) state

A typical schematic diagram for RS-485 is shown in Figure 1.4.

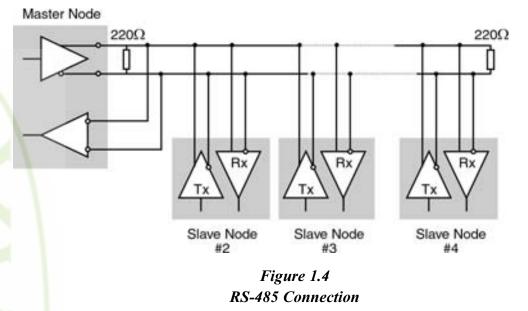

Protocols

An important addition to the physical standards is a protocol. A protocol is essentially a common set of rules governing the exchange of data between transmitter and receiver on a data communications link. It is a way of packaging the data transmitted. A typical example of a protocol is given in Figure 1.5.

Write Request	Frame	(Pass	1)
---------------	-------	-------	----

EOT (^D)	ADD	STX (^B)	PAR	DATA	ETX (^C)	BCC
Reset Data Link	Address Field	Start of Text	Parameter Field	Data Field	End of Text	Block Checksum
1 Byte	4 Bytes	1 Byte	3 Bytes	6 Bytes	1 Byte	1 Byte

Write Response Frame (Pass 1)




Figure 1.5 Format of a Read Command and its Response

7 —

The following fields are used:

ADD	The address field. It is the address of the slave device on the data communications link.
BCC	The Block Check Character, a 'unique fingerprint' which the receiver checks against the message to detect any errors in transmission.
PAR	The address of the parameter requested and can be in the range of 000 to 999.

The write request frame is sent to a slave device from a master computer terminal to change, for example, a set point of a variable speed drive. The ACK response is returned by the slave device to indicate that the setpoint has actually been changed.

Chapter 2 Industrial Networking and TCP/IP

Introduction

A LAN is a communications path between one or more computers, file-servers, terminals, workstations and various other intelligent peripheral equipment. A LAN allows access to devices to be shared by several users, with full connectivity between all stations on the network.

The connection of a device into a LAN is made through a node. A node is any point where a device is connected and each node is allocated a unique address number. Every message sent on the LAN must be prefixed with the unique address of the destination node. LANs operate at relatively high speed (i.e. 2 - 100 Mbps range and upwards) with a shared transmission medium over a fairly small local area.

In a LAN, the software that controls the transfer of messages among the devices on the network must deal with the problems of sharing the common resources of the network without conflict or corruption of data. Since many users can access the network at the same time, some rules must be established on which devices can access the network, when and under what conditions. These rules are covered under the general subject of access control. The rules that apply depend on the structure and type of the network, e.g. a star, ring or bus topology and a token passing or CSMA/CD network type.

The Open Systems Interconnection Model

A communication framework which has had a tremendous impact on the design of LANs is the Open Systems Interconnection (or OSI) model. The objective of this model is to allow existing and developing standards to be placed in a common framework to ensure open connectivity between different systems.

The International Standards Organisation define the purpose of the OSI model: '...to provide a common basis for the co-ordination of standards development for the purpose of systems interconnection, while allowing existing standards to be placed into perspective within the overall Reference Model.'

Engineers Pocket Guide

It should be realized at the outset that the OSI Reference Model is not a protocol or set of rules for how a protocol should be written but rather an overall framework in which to define protocols.

Application Layer	File transfer, message exchange.
Presentation Layer	Data format or representation.
Session Layer	Organisation and synchronisation of the data exchange.
Transport Layer	Channel for transfer of messages from one application process to another.
Network Layer	Optimum routing of messages from one network to another.
Data Link Layer	Framing and error correction format of data.
Physical Layer	Electrical and mechanical definition of the physical system.

A summary of the seven different layers of the OSI model is given below.

Network Topologies

The way in which nodes are interconnected is known as the network topology. The three most common topologies are:

Star Topology


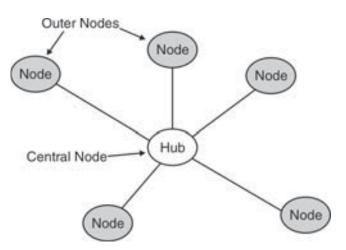


Figure 2.1 Example of a Star Network Topology

— 10 —

• Ring or Loop Topology

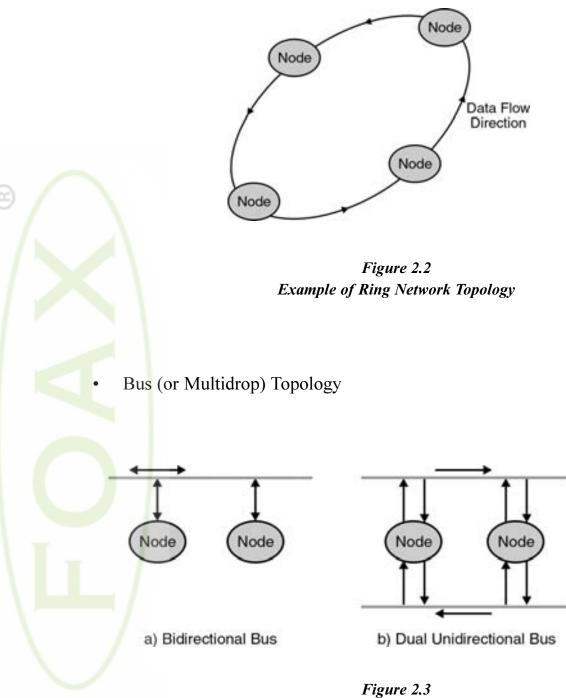

Examples of Bus Network Topology

Access Control

There are two methods of controlling the access to a network.

• CSMA/CD (Carrier Sense Multiple Access/Collision Detection)

This is a simple but effective protocol where the node that wants to transmit listens for any other transmission that may be occurring on the bus. If this node does not hear any other activity, it transmits its message. If during the transmission of its message, it detects a collision (or another node transmitting at the same time), it stops its transmission for a random length of time before retrying to transmit.

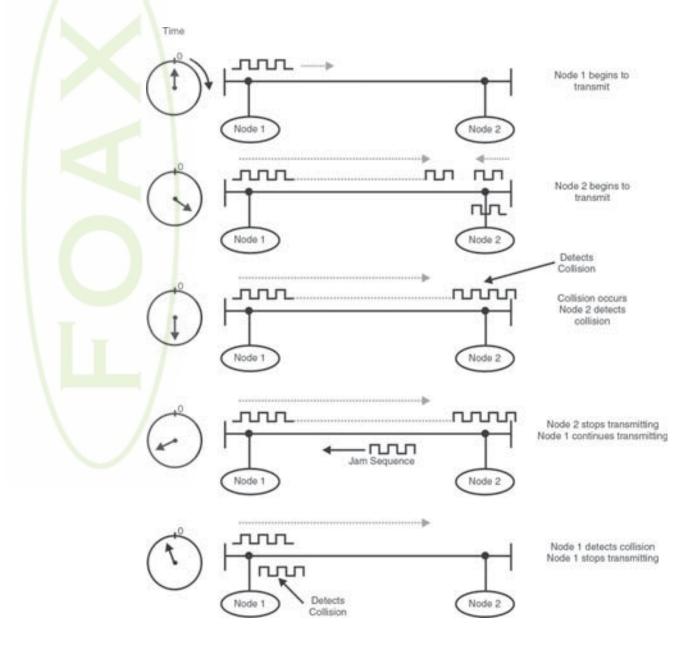


Figure 2.4 Operation of CSMA/CD

Control Token Access

A special bit pattern called a 'control token' is passed from node to node around a logical ring until it is received by a node wishing to transmit a frame. The transmitting node then sends the frame using the physical ring and on conclusion of the transmission, it passes the control token onto the next node in the sequence.

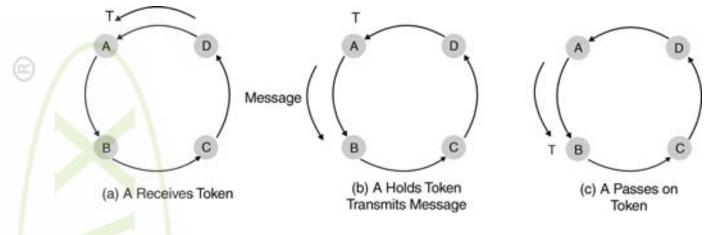


Figure 2.5 Control Token Access

The control token is used with both the ring and bus physical topologies. Token Ring LANs use a physical ring to connect the nodes.

On Token Bus LANs the nodes are connected to a physical bus but the control token is still passed from node to node in a logical ring.

Main LAN Standards

IEEE 802.1	Details how the other 802 standards relate to one another and to the ISO/OSI model - the OSI model, prepared by the ISO.
IEEE 802.2	Divides the ISO/OSI data link layer into two sublayers and (ISO 8802.2) defines the functions of the Logical Link Control (LLC) and the Medium Access Control (MAC) sub-layers.
IEEE 802.3	Definers the CSMA/CD protocol, which is often referred to as Ethernet.
IEEE 802.4 (ISO 8802.4)	Defines the token passing bus access method.
IEEE 802.5	Defines the token ring access method.
ISO 9314 (ANSI X3T9.5)	Defines the fiber distributed data interface (FDDI), which uses a token ring access method with fiber optic cables and operates at a bit rate of 100 Mbps.

Table 2.1LAN Standards

Ethernet Standards

Historically, CSMA/CD bus networks are also referred to as Ethernet and are generally implemented as a 10 Mbps baseband coaxial cable network or twisted pair cable ("Category 5").

The standard documents (ISO 8802.3) support other cable media and transmission rates as follows:

10BASE-2 Thinwire coaxial cable (0.25 inch diameter). 10 Mbps, single cable bus-		
10BASE-5 Thickwire coaxial cable (0.5 inch diameter). 10 Mbps, single cable bus.		
10BASE-T Unscreened twisted pair cable (0.4 to 0.6mm conductor diameter) 10Mbps, twin cable bus.		
10BASE-F Optical fiber cables, 10 Mbps, twin fiber bus.		
1BASE-5 Unscreened twisted pair cables. 1 Mbps, twin cable bus.		
10BROAD-36Cable Television (CATV) type cables, 10 Mbps, Broadband.		

Table 2.2Cable Media and Transmission Rates

— 14 —

802.3 CSMA/CD Hardware Requirements

An example of Standard Ethernet' or 10BASE-5 is given in the figure below:

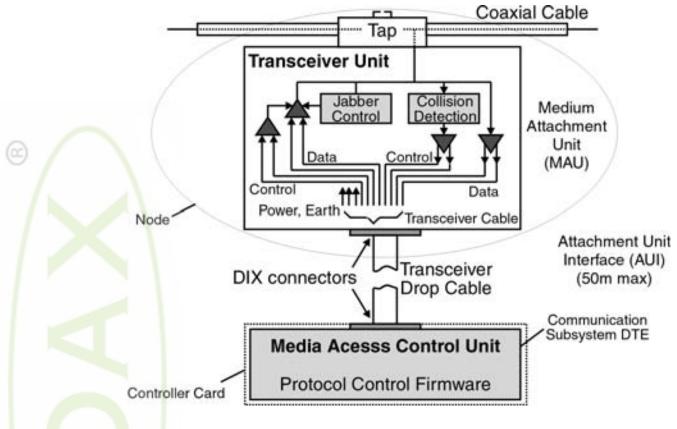


Figure 2.6 10BASE-5 Hardware Components

The format of a transmitted 802.3 frame is shown in Figure 2.7.

	Preamble	Start Delimiter	Destination Address	Source Address	Length	Data	CRC
Ì	7 Bytes	1 Byte	2 or 6 Bytes	2 or 6 Bytes	2 Bytes	46 - 1500 Bytes	4 Bytes

Figure 2.7 Format of a Typical CSMA/CD Frame

Engineers Pocket Guide

Preamble Field	This allows the receiving electronics of the MAC unit to achieve synchronisation with the frame.
Start of Frame a Delimiter (SFD)	This contains the pattern 10101011 and indicates the start of valid frame.
Destination and Source Address	Each address may be either 16 or 48 bits. This size must naturally be consistent for all nodes in a particular LAN installation.
Length Indicator	This is a two byte field which indicates the number of bytes in the data field.
Frame Check Field	This contains a 32 bit cyclic redundancy check that is used for error detection.

Table 2.3Frame Format Definitions

The TCP/IP Protocol Structure

TCP/IP is a protocol that fits into the data frame area of the Ethernet frame. TCP/IP provides three layers of services:

Application Services

Guaranteed Reliable Transport Service

Connectionless Packet Delivery Service

Table 2.4Structure of an Internet Datagram

The packet delivery system is defined as an unreliable (no guaranteed delivery), best effort, connectionless packet delivery system. The protocol that describes this is called the *Internet Protocol abbreviated as IP*.

— 16 —

The basic packet is called an internet datagram. The structure of the internet datagram is as follows:

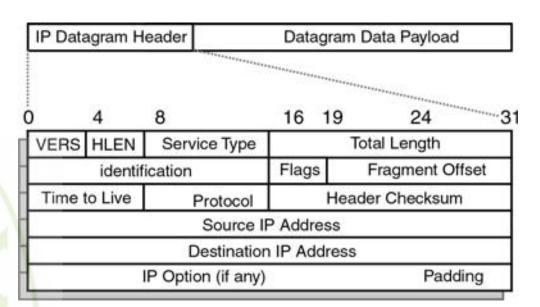


Figure 2.8 Structure of an Internet Datagram

	VERS	A version of the protocol.
	HLEN	The datagram header length in 32 bit words.
	Service Type	This is merely a recommendation to the routing software on the service required.
	Total Length	Length of the datagram in bytes (including the header section).
	Identification	Each datagram must have a unique number
	Fragment Offset	This specifies the offset of the data in the original datagram.
	Time to Live (TTL)	As the datagram passes through the network, its time is decremented for each pass of each gateway or host.
	Protocol	This specifies the protocol format for the data payload area.
	Header Checksum	Complement the result of adding the IP header as a series of 16 bit integers using one's complement arithmetic.
	Source IP and Destination IP Addresses	The IP addresses of source and destination nodes.
	IP Options	Options used for control purposes.

Table 2.5Definitions of the Internet Datagram Structure Headings

Transmission Control Protocol (TCP)

TCP specifies the structure of the messages, the acknowledgements between two nodes for reliable data transfer, how messages are routed to multiple destinations on a machine and how errors are detected and corrected.

Conceptual Layer

Boundary

Application	Software outside the operating system
Transport	Software inside the operating system
Internet	Only IP address used
Network Interface	Physical address used
Network Interface	

Figure 2.9 Location of TCP/IP Application Layer in Overall Structure

Application Protocols for TCP/IP

There are a variety of application protocols available with TCP/IP suite. These are:

TELNET	This allows a user at one terminal to communicate interactively with an application process on another terminal.		
FTP	This allows a user to interact with a remote file system.		
SMTP	A network wide mail transfer service.		
SNMP	A user can obtain data on the network performance and control a router/bridge.		

Table 2.6TCP/IP Application Protocols

Chapter 3 Theory of Fiber Optic Transmission

Construction of an Optical Fiber

An optical fiber consists of a tube of glass constructed of a number of layers of glass, which when looked at in profile appear to have a number of concentric rings. Each layer (or ring) of glass has a different refractive index.

The core has a higher retractive index than the cladding. This ensures total internal reflection of the core-cladding boundary and guides the light through the fiber core. For graded index multimode fibers the core is made with progressively changing refractive index:- highest in the center and gradually reducing towards the outside. Multimode fibers have either 50 or 62.5 micrometer cores and are used for shorthaul systems. Single mode fibers have a core of about 8.5 micrometers and are used exclusively for high bandwidth, long distance systems. Both types of fiber are coated with a protective plastic layer to protect the pristine glass surface from damage.


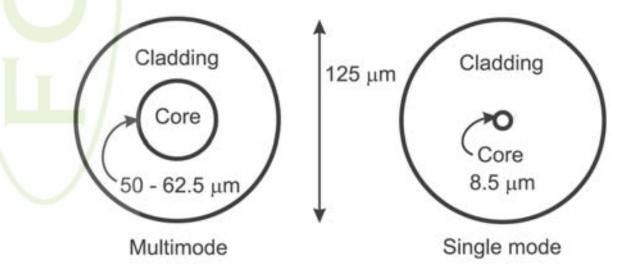


Figure 3.1 Optical Fiber Cross Sections

— 19 —

The core and the cladding will trap the light ray in the core provided the light ray enters the core at an angle greater than the critical angle. The light ray will then travel down the core of the fiber, with minimal loss in power, by a series of total internal reflections. Figure 3.2 illustrates this process.

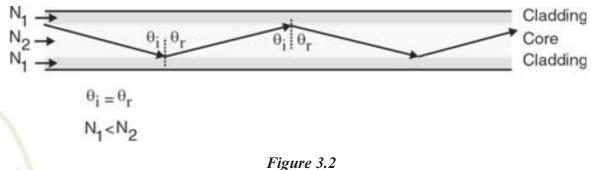

Light Ray Travelling Through an Optical Fiber

It would in theory be possible to simply have a tube of glass of uniform refractive index acting as the core, with air acting as the outer cladding. This is possible as air has a refractive index lower than glass. This type of implementation does not generally work well because an unprotected core that is covered in scratches, dirt and oil will appear to have an irregular cladding, with a higher refractive index at these irregular points than the core. Therefore a lot of light will not be reflected and will be radiated out of the glass. This is illustrated in Figure 3.3.


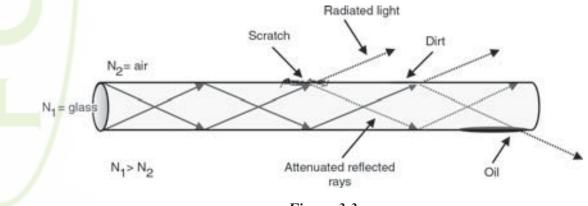


Figure 3.3 Problems Associated with a Glass Air Interface

The core is generally constructed of Germania doped silica glass. The cladding is generally constructed of near pure silica glass. The cladding therefore has a lower refractive index than the core (the more impurities there are in glass the higher the density of that glass). The sheath is generally constructed of ultra violet cured plastic which provides protection against abrasion and external forces. The sheath will also be color coded in a similar manner to multicore copper cables to enable the user to distinguish between fibers.

Fresnel Reflection

When light enters the core of a fiber and strikes the cladding at an angle less than the critical angle then most of the light energy is refracted into the cladding and is lost (as is desired). A very small amount of light will be reflected back into the core. This reflected light is referred to as 'Fresnel Reflected' light. It is generally less than 4% of the total incident light energy and therefore generally not powerful enough to carry a spurious signal to the other end of the fiber. This is illustrated in Figure 3.4.

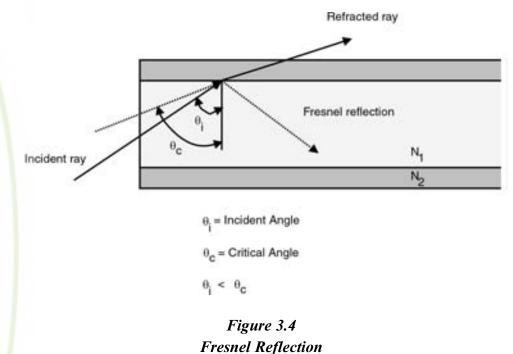

The Light Transmission Nature of Glass

Transmission down optical fibers is generally in the near infra-red band of frequencies. In this range of frequencies the optical fiber exhibits the lowest signal attenuation. Figure 3.5 illustrates typical attenuation characteristics of glass that is used in fiber optics. Note that this curve does vary to some degree depending on the type of glass used for manufacture and the type and degree of impurities infused into it.


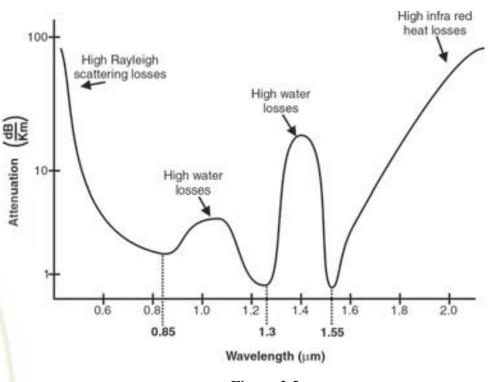


Figure 3.5 Typical Attenuation Responses for a Fiber


Numerical Aperture

The previous sections of this chapter have discussed the process of light travelling through an optical fiber. This section will discuss the requirements for transmitting into an optical fiber. It is a requirement that for light to successfully travel down an optical fiber it must enter the fiber and reflect off the cladding at greater than the critical angle. Due to the refractive changes to the direction of the light as it enters the core of a fiber there is a limit to the angle at which the light can enter the core for it to successfully propagate down the optic fiber. Any light striking the cladding at less than the critical angle will go straight through into the cladding and be lost. This is illustrated in Figure 3.6.

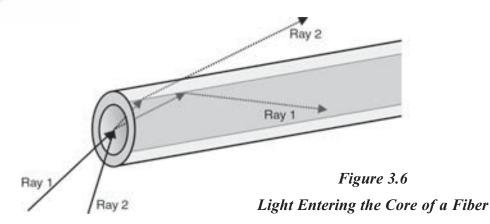

— 22 —

Since the fiber is cylindrical there will be a geometrical cone at the entrance to the fiber. For light entering the core within this cone all the light rays will strike the cladding at greater than the critical angle and will therefore allow successful transmission down the fiber. This is referred to as the 'Acceptance Cone' and is illustrated in Figure 3.7.

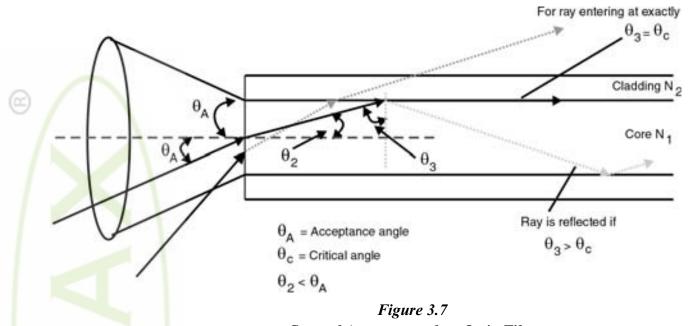

Cone of Acceptance of an Optic Fiber

The half angle (θ_1) of this acceptance cone is referred to as the 'Acceptance Angle'. The value of the acceptance angle will depend on the refractive indices of the core, cladding and air (air having a refractive index of 1) or whatever material the source of light is. A light ray entering the core at an angle greater than θ_1 will disperse into the cladding. A light ray coming in at an angle of exactly θ_1 will strike the core/cladding interface at angle θ_c (critical) and will leave parallel to the interface. A measurement is used to specify the light collecting ability of a fiber. This is referred to as the 'Numerical Aperture' (NA). NA is the SIN of the acceptance angle, that is:

NA = SIN (θ_1)

Modal Propagation In Fibers

Optical fibers are classified according to the number of rays of light that can be carried down the fiber at one time. This is referred to as the 'Mode of Operation' of the fiber. Therefore a mode of light is simply a ray of light.

— 23 —

The following section discusses the various modes of propagation in optical fibers and the effects of modal dispersion.

Modal Dispersion

It is important firstly to examine the nature and effects of modal transmission. A fiber that has a high NA and/or diameter will have a large number of modes (rays of light) operating along the length of that fiber.

Multimode Step and Graded Index Fibers

The term 'Multimode' generally applies to fibers with a diameter of 50 micrometers or greater. Because of the relatively wide diameter of the core, multiple modes of light are able to travel down the core. As was previously discussed, allowing multiple modes of light to travel down a fiber causes modal dispersion.

The modal dispersion that occurs in a multimode fiber affects or is affected by a number of the operating parameters of the fiber.

Attenuation

Multimode fibers have a maximum operating distance of approximately 5 km.

Bandwidth

Multimode fibers have a maximum operating data speed of approximately 2-300 Mbits/s.

Wavelength

They generally operate at wavelengths of 850 nm or 1300 nm. Some fibers are available that will operate at both wavelengths. (Different physical communications standards use different operating wavelengths).

The wide diameter of the multimode fiber makes it suitable for using with LED light sources. This in turn makes the complete transmission system a lot cheaper than compared to fibers that have a thinner diameter and which require the use of lasers. A further advantage with using multimode fibers is that the wider diameter makes them easier to splice and to terminate, which makes the final installed system cheaper.

— 24 —

Multimode fibers are constructed in three main sizes.

- 1. 50 micron cores
- 2. 62.5 micron cores
- 3. 100 micron cores

Monomode Fibers

A monomode fiber (or sometimes referred to as a single mode fiber) is basically a step index fiber with a very small core diameter. In theory because the cores are so small only a few modes of light can travel down the fiber. To further reduce the number of modes the fiber is constructed with very little difference between the refractive indices of the core and the cladding. This is illustrated in Figure 3.8.

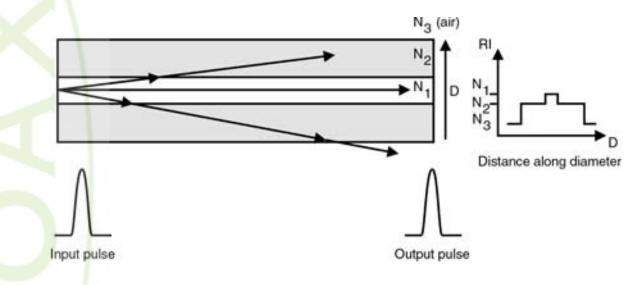


Figure 3.8

Monomode Optic Fiber Transmission


For the transmission of light down a monomode fiber to operate as described above the pulse of light that is injected into the core must be very precisely aimed down the centre of the core or the majority of the light will be lost in the cladding. If the system is implemented correctly the input signal pulse into the fiber will appear at the output of the fiber as a signal pulse with almost exactly the same shape. With only the fundamental mode travelling down the fiber there can theoretically be no modal dispersion in monomode fiber.

The core diameter of a monomode fiber is generally in the region of 8 to 9 μ m. A typical measurement specification for a monomode fiber is:

 $8.5/125/250 \ \mu m$

A Comparison of Data Rate, Distance and Fiber Type

The following graph shows the expected data rates and transmission distances for the various mode and indexed fibers at different wavelengths.

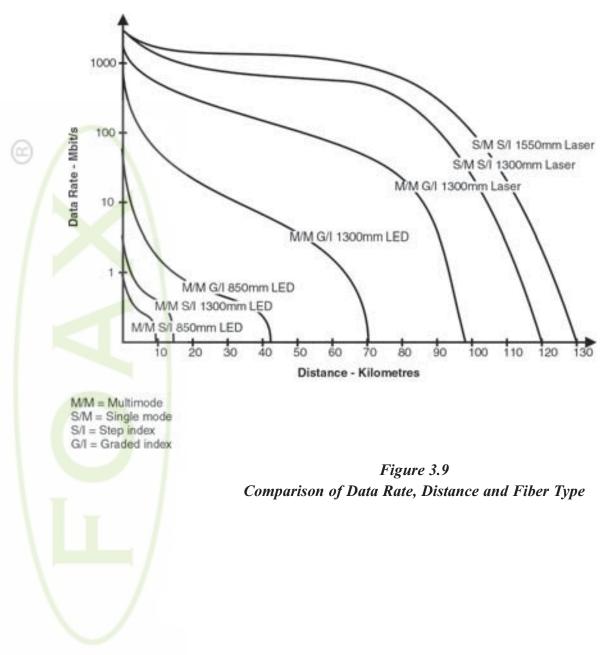

— *26* —

Communications, Industrial Networking and TCP/IP

Appendix A Glossary of Terms

10BASE2 IEEE802.3 (or Ethernet) implementation on thin coaxial cable (RG58/AU). 10BASE5 IEEE802.3 (or Ethernet) implementation on thick coaxial cable. **10BASET** IEEE802.3 (or Ethernet) implementation on unshielded 22 AWG twisted pair cable. A/D Conversion Time This is the length of time a board requires to convert an analog signal into a digital value. The theoretical maximum speed (conversions/ second) is the inverse of this value. See Speed/Typical Throughput. A/D Analog to Digital conversion. Absolute Addressing A mode of addressing containing both the instruction and location (address) of data. Closeness of indicated or displayed value to the ideal Accuracy measured value. ACK Acknowledge (ASCII - control F). Acknowledge A handshake line or protocol code which is used by the receiving device to indicate that it has read the transmitted data. Active Device Device capable of supplying current for a loop. Active Filter A combination of active circuit devices (usually amplifiers), with passive circuit elements (resistors and capacitors), which have characteristics that more closely match ideal filters than do passive filters. Actuator Control element or device used to modulate (or vary) a process parameter. Address A normally unique designator for location of data or the identity of a peripheral device which allows each device on a single communications line to respond to its own message. Address Register A register that holds the address of a location containing a data item called for by an instruction. AFC Automatic Frequency Control. The circuit in a radio receiver that automatically keeps the carrier frequency centred in the passband of the filters and demodulators. AGC Automatic Gain Control. The circuit in a radio that automatically keeps the carrier gain at the proper level.

Engineers Pocket Guide

	Algorithm	Can be used as a basis for writing a computer program. This is a set of rules with a finite number of steps for solving a problem.
	Alias Frequency	A false lower frequency component that appears in data reconstructed from original data acquired at an insufficient sampling rate (less than two times the maximum frequency of the original data).
	ALU	see Arithmetic Logic Unit.
	Amplitude Modulation	A modulation technique (also referred to as AM or ASK) used to allow data to be transmitted across an analog network, such as a switched telephone network. The amplitude of a single (carrier) frequency is varied or modulated between two levels; one for binary 0 and one for binary 1.
	Analog	A continuous real-time phenomenon in which the information values are represented in a variable and continuous waveform.
	Analog Input Board	Printed Circuit Board which converts incoming analog signals to digital values.
	ANSI	American National Standards Institute. The principle standards development body in the USA.
	Apogee	The point in an elliptical orbit that is furtherest from earth.
	Appletalk	A proprietary computer networking standard initiated by Apple Computer for use in connecting the Macintosh range of computers and peripherals (including Laser Writer printers).
		This standard operates at 230 kilobits/second.
	Application Program	A sequence of instructions written to solve a specific problem facing organisational management.
		Theseprogramsarenormallywrittenina high-levellanguageanddraw on resources of the operating systemand the computer hardwarein executing its tasks.
	Application Layer	The highest layer of the seven layer ISO/OSI Reference Model structure, which contains all user or application programs.
	Arithmetic Logic Unit	The element(s) in a processing system that perform(s) the mathematical functions such as addition, subtraction, multiplication, division, inversion, AND, OR, NAND and NOR.
	ARP	Address Resolution Protocol. A Transmission Control Protocol/ Internet Protocol (TCP/IP) process that maps an IP address to Ethernet address, required by TCP/IP for use with Ethernet.
	ARQ	Automatic Request for Transmission. A request by the receiver for the transmitter to retransmit a block or a frame because of errors detected in the originally received message.
	AS	Australian Standard.

Communications, Industrial Networking and TCP/IP

ASCII	American Standard Code for Information Interchange. A universal standard for encoding alphanumeric characters into 7 or 8 binary bits. Drawn up by ANSI to ensure compatibility between different computer systems.
ASIC	Application Specific Integrated Circuit.
ASK	Amplitude Shift Keying. See Amplitude Modulation.
ASN.1	Abstract Syntax Notation One. An abstract syntax used to define the structure of the protocol data units associated with a particular protocol entity.
Asynchronous	Communications in which characters can be transmitted at an arbitrary, unsynchronised time, and where the time intervals between transmitted characters may be of varying lengths.
	Communication is controlled by start and stop bits at the beginning and end of each character.
Attenuation	The decrease in signal magnitude or strength between two points.
Attenuator	A passive network that decreases the amplitude of a signal (without introducing any undesirable characteristics to the signals such as distortion).
AUI CABLE	Attachment Unit Interface Cable. Sometimes called the drop cable to attach terminals to the transceiver unit.
Auto Tracking Antenna	A receiving antenna that moves in synchronism with the transmitting device which is moving (such as a vehicle being telemetered).
Autoranging	An autoranging board can be set to monitor the incoming signal and automatically select an appropriate gain level based on the previous incoming signals.
AWG	American Wire Gauge.
Background Program	An application program that can be executed whenever the facilities of the system are not needed by a higher priority program.
Backplane	A panel containing sockets into which circuit boards (such as I/O cards, memory boards and power supplies) can be plugged.
Balanced Circuit	A circuit so arranged that the impressed voltages on each conductor of the pair are equal in magnitude but opposite in polarity with respect to a defined reference.
Band Pass Filter	A filter that allows only a fixed range of frequencies to pass through. All other frequencies outside this range (or band) are sharply reduced in magnitude.
Band Reject	A circuit that rejects a defined frequency band of signals while passing all signals outside this frequency range (both lower than and higher than).

Engineers Pocket Guide

Bandwidth

Baud

Baudot

BCC

BCD

BEL.

Bifilar

BIOS

BERT/BLERT

The range of frequencies available, expressed as the difference between the highest and lowest frequencies, in hertz (cycles per second, abbreviated Hz).

Bar Code Symbol An array of rectangular parallel bars and spaces of various widths designed for the labelling of objects with unique identifications. A bar code symbol contains a leading quiet zone, a start character, one or more data characters including, in some cases, a check character, a stop character, and a trailing quiet zone.

Base Address A memory address that serves as the reference point. All other points are located by offsetting in relation to the base address.

Base Band Base Band operation is the direct transmission of data over a transmission medium without the prior modulation on a high frequency carrier band.

Base Loading An inductance situated near the bottom end of a vertical antenna to modify the electrical length. This aids in impedance matching.

Unit of signalling speed derived from the number of events per second (normally bits per second). However, if each event has more than one bit associated with it, the baud rate and bits per second are not equal.

Data transmission code in which five bits represent one character. Sixty-four alphanumeric characters can be represented.

Block Check Character. Error checking scheme with one check character; a good example being Block Sum Check.

Binary Coded Decimal. A code used for representing decimal digits in a binary code.

Bell (ASCII for control-G).

Bit Error Rate/Block Error Rate Testing. An error checking technique that compares a received data pattern with a known transmitted data pattern to determine transmission line quality.

Two conducting elements used in parallel (such as two parallel wires wound on a coil form).

Binary Coded Decimal (BCD) A code used for representing decimal digits in a binary code.

The basic input/output system for the computer, usually firmwarebased. This program handles the interface with the PC hardware and isolates the Operating Software (OS) from the low-level activities of the hardware.

As a result, application software becomes more independent of the particular specifications of the hardware on which it runs, and hence more portable.

Bipolar Range / Inputs

A signal range that includes both positive and negative values. Bipolar inputs are designed to accept both positive and negative voltages. (Example: ± 5 V).

Bisynchronous Transmission

See BSC.

Bit Stuffing with Zero Bit Insertion A technique used to allow pure binary data to be transmitted on a synchronous transmission line. Each message block (frame) is encapsulated between two flags which are special bit sequences. Then if the message data contains a possibly similar sequence, an additional (zero) bit is inserted into the data stream by the sender, and is subsequently removed by the receiving device. The transmission method is then said to be data transparent.

BIT (Binary Digit) Derived from "BInary DigiT", a one or zero condition in the binary system.

Bits & Bytes One bit is one binary digit, either a binary 0 or 1. One byte is the amount of memory needed to store each character of information (text or numbers). There are eight bits to one byte (or character), and there are 1024 bytes to one kilobyte (KB). There are 1024 kilobytes to one megabyte (MB).

In block-structured programming languages, a section of programming languages or a section of program coding treated as a unit.

This is used for the detection of errors when data is being transmitted. It comprises a set of binary digits (bits) which are the modulo 2 sum of the individual characters or octets in a frame (block) or message.

Bayonet type coaxial cable connector.

Bits per second. Unit of data transmission rate.

A device to connect similar sub-networks without its own network address. Used mostly to reduce the network load.

A communications channel that has greater bandwidth than a voice grade line and is potentially capable of greater transmission rates.

A message on a bus intended for all devices which requires no reply.

Backspace (ASCII Control-H).

British Standard.

BSC

BS

BS

Block

BNC

bps

Bridge

Broad Band

Broadcast

Block Sum Check

Bisynchronous Transmission. A byte or character oriented communication protocol that has become the industry standard (created by IBM). It uses a defined set of control characters for synchronised transmission of binary coded data between stations in a data communications system.

Engineers Pocket Guide

	Bubble Memory	Describes a method of storing data in memory where data is represented as magnetized spots called magnetic domains that rest on a thin film of semiconductor material. Normally used in high- vibration, high-temperature or otherwise harsh industrial environments.
	Buffer	An intermediate temporary storage device used to compensate for a difference in data rate and data flow between two device (also called a spooler for interfacing a computer and a printer).
	Burst Mode	A high speed data transfer in which the address of the data is sent followed by back to back data words while a physical signal is asserted.
	Bus	A data path shared by many devices, with one or more conductors for transmitting signals, data or power.
	Byte	A term referring to eight associated bits of information; sometimes called a "character".
	Cache Memory	A fast buffer memory that fits between the CPU and the slower main memory to speed up CPU requests for data.
	Capacitance (mutual)	The capacitance between two conductors with all other conductors, including shield, short circuited to the ground.
	Capacitance	Storage of electrically separated charges between two plates having different potentials. The value is proportional to the surface area of the plates and inversely proportional to the distance between them.
	Cascade	Two or more electrical circuits in which the output of one is fed into the input of the next one.
	Cassegrain Antenna	Parabolic antenna that has a hyperbolic passive reflector situated at the focus of the parabola.
	CCD	Charge-Coupled Device (camera).
	CCIR	Comité Consultatif Internationale des Radiocommunications.
	CCITT	Consultative Committee International Telegraph and Telephone. An international association that sets worldwide standards (e.g. V.21, V.22, V.22bis).
	Cellular Polyethylene	Expanded or "foam" polyethylene consisting of individual closed cells suspended in a polyethylene medium.
	CGA	Color Graphics Adapter. A computer standard utilising digital signals offering a resolution of 320 by 200 pixels and a palette of 16 colors.
	Channel Selector	In an FM discriminator the plug-in module which causes the device to select one of the channels and demodulate the subcarrier to recover data.
	Character	Letter, numeral, punctuation, control figure or any other symbol contained in a message.

Characteristic Impedance	e The impedance that, when connected to the output terminals of a transmission line of any length, makes the line appear infinitely long. The ratio of voltage to current at every point along a transmission line on which there are no standing waves.
Clock	The source of timing signals for sequencing electronic events such as synchronous data transfer or CPU operation in a PC.
Clock Pulse	A rising edge, then a falling edge (in that order) such as applied to the clock input of an 8254 timer/counter.
Clock	The source(s) of timing signals for sequencing electronic events eg synchronous data transfer.
Closed Loop	A signal path that has a forward route for the signal, a feedback network for the signal and a summing point.
CMRR	Common Mode Rejection Ratio - A data acquisition's board's ability to measure only the voltage difference between the leads of a transducer, rejectingwhat the leads have in common. The higher the CMRR, the better the accuracy.
CMV	Common Mode Voltage.
CNR	Carrier to Noise Ratio. An indication of the quality of the modulated signal.
Cold-junction Compensation	Thermocouple measurements can easily be affected by the interface the thermocouples are connected to. Cold-junction compensation circuitry compensates for inaccuracies introduced in the conversion process.
Collector	The voltage source in a transistor with the base as the control source and the emitter as the controlled output.
Collision	The situation when two or more LAN nodes attempt to transmit at the same time.
Common Carrier	A private data communications utility company that furnishes communications services to the general public.
Common Mode Signal	The common voltage to the two parts of a differential signal applied to a balanced circuit.
Commutator	A device used to effect time-division multiplexing by repetitive sequential switching.
Compiler	A program to convert high-level source code (such as BASIC) to machine code-executable form, suitable for the CPU.
Composite Link	The line or circuit connecting a pair of multiplexers or concentrators; the circuit carrying multiplexed data.
Composite	A video signal that contains all the intensity, color and timing information necessary for a video product.

Conical Scan Antenna	An automatic tracking antenna system in which the beam is steered in a circular path so that it forms a cone.
Contention	The facility provided by the dial network or a data PABX which allows multiple terminals to compete on a first come, first served basis for a smaller number of computer ports.
Control System	A system in which a series of measured values are used to make a decision on manipulating various parameters in the system to achieve a desired value of the original measured values.
Convolution	An image enhancement technique in which each pixel is subjected to a mathematical operation that groups it with its nearest neighbours and calculates its value accordingly.
Correlator	A device which compares two signals and indicates the similarity between the two signals.
Counter/ Timer Trigger	On-board counter/timer circuitry can be set to trigger data acquisition at a user-selectable rate and for a particular length of time.
Counter Data Register	The 8-bit register of an (8254 chip) timer/counter that corresponds to one of the two bytes in the counter's output latch for read operations and count register for write operations.
CPU	Central Processing Unit.
CR	Carriage Return (ASCII control-M).
CRC	Cyclic Redundancy Check. An error-checking mechanism using a polynomial algorithm based on the content of a message frame at the transmitter and included in a field appended to the frame. At the receiver, it is then compared with the result of the calculation that is performed by the receiver. Also referred to as CRC-16.
Cross Talk	A situation where a signal from a communications channel interferes with an associated channel's signals.
Crossed Pinning	Wiring configuration that allows two DTE or DCE devices to communicate. Essentially it involves connecting pin 2 to pin 3 of the two devices.
Crossover	In communications, a conductor which runs through the cable and connects to a different pin number at each end.
Crosstalk	A situation where a signal from a communications channel interferes with an associated channel's signals.
CSMA/CD	Carrier Sense Multiple Access/Collision Detection.
	When two devices transmit at the same time on a local area network, they both cease transmission and signal that a collision has occurred. Each then tries again after waiting for a random time period.

Current Sink	This is the amount of current the board can supply for digital output signals. With 10-12 mA or more of current sink capability, a board can turn relays on and off. Digital I/O boards with less than 10-12 mA of sink capability are designed for data transfer only, not for hardware power relay switching.
Current Loop	A communication method that allows data to be transmitted over a longer distance with a higher noise immunity level than with the standard RS-232C voltage method.
	A mark (a binary 1) is represented by current; and a space (or binary 0) is represented by the absence of current.
Current Inputs	A board rated for current inputs can accept and convert analog current levels directly, without conversion to voltage.
D/A	Digital to Analog.
DAS	Data Acquisition System.
Data Integrity	A performance measure based on the rate of undetected errors.
Data Reduction	The process of analysing a large quantity of data in order to extract some statistical summary of the underlying parameters.
Data Link Layer	This corresponds to layer 2 of the ISO Reference Model for open systems interconnection. It is concerned with the reliable transfer of data (no residual transmission errors) across the data link being used.
Data Integrity	A performance measure based on the rate of undetected errors.
Datagram	A type of service offered on a packet-switched data network. A datagram is a self contained packet of information that is sent through the network with minimum protocol overheads.
dBi	A unit that is used to represent the gain of an antenna compared to the gain of an isotropic radiator.
dBm	A signal level that is compared to a 1-mW reference.
dBmV	A signal amplitude that is compared to a 1-mV reference.
dBW	A signal amplitude that is compared to a 1-Watt reference.
DCE	Data Communications Equipment. Devices that provide the functions required to establish, maintain and terminate a data transmission connection. Normally it refers to a modem.
Decibel	A logarithmic measure of the ratio of two signal levels where $dB = 20\log_{10} V_1/V_2$. Being a ratio, it has no units of measure.
Decibel (dB)	A logarithmic measure of the ratio of two signal levels where $dB = 20\log_{10} V_1/V_2$ or where $dB = 10\log_{10} P_1/P_2$ and where V refers to Voltage or P refers to Power. Note that it has no unit of measure.

Decoder	A device that converts a combination of signals into a single signal representing that combination.
Decommutator	Equipment for the demultiplexing of commutated signals.
Default	A value or setup condition assigned automatically unless another is specified.
Delay Distortion	Distortion of a signal caused by the frequency components making up the signal having different propagation velocities across a transmission medium.
DES	Data Encryption Standard.
Deviation	A movement away from a required value.
DFB	Display Frame Buffer.
Diagnostic Program	A utility program used to identify hardware and firmware defects related to the PC.
Dielectric Constant (E)	The ratio of the capacitance using the material in question as the dielectric, to the capacitance resulting when the material is replaced by air.
Differential	See Number of channels.
Digital	A signal which has definite states (normally two).
Digitize	The transformation of an analog signal to a digital signal.
DIN	Deutsches Institut Fur Normierung.
DIP	Acronym for dual in line package referring to integrated circuits and switches.
Diplexing	A device used to allow simultaneous reception or transmission of two signals on a common antenna.
Direct Memory Access	A technique of transferring data between the computer memory and a device on the computer bus without the intervention of the micro- processor. Also abbreviated to DMA.
Discriminator	Hardware device to demodulate a frequency modulated carrier or subcarrier to produce analog data.
Dish Antenna	An antenna in which a parabolic dish acts a reflector to increase the gain of the antenna.
Dish	Concave antenna reflector for use at VHF or higher frequencies.
Diversity Reception	Two or more radio receivers connected to different antennas to improve signal quality by using two different radio signals to transfer the information.
DLE	Data Link Escape (ASCII character).
DMA	Direct Memory Access.

device moving with respect to the observing device.DownlinkThe path from a satellite to an earth station.DPIDots per Inch.DPLLDigital Phase Locked Loop.DRDynamic Range. The ratio of the full scale range (FSR) of a da converter to the smallest difference it can resolve. DR = 2 ⁿ who n is the resolution in bits.DRAMDynamic Random Access Memory. See RAM.DriftA gradual movement away from the defined input/output conditi over a period of time.Driver SoftwareA program that acts as the interface between a higher level codi structure and the lower level hardware/firmware component a computer.DSPDigital Signal Processing.DSRData Set Ready. An RS-232 modem interface control signal whi indicates that the terminal is ready for transmission.DTEData Terminal Equipment. Devices acting as data source, data sir or both.Dual-ported RAMAllows acquired data to be transferred from on-board memory the computer's memory while data acquisition is occurring.DuplexThe ability to send and receive data over the sar communications line.Dynamic RangeThe difference in decibels between the overload or maximum a minimum discernible signal level in a system.EBCDICExtended Binary Coded Decimal Interchange Code. An 8-bit charac code used primarily in IBM equipment. The code allows for 2 different bit patterns.EEPROMElectrically Erasable Programmable Read Only Memory. Th memory unit can be erased by applying an electrical signal to t EEPROM and then reprogrammed.			
device moving with respect to the observing device.DownlinkThe path from a satellite to an earth station.DPIDots per Inch.DPLLDigital Phase Locked Loop.DRDynamic Range. The ratio of the full scale range (FSR) of a da converter to the smallest difference it can resolve. DR = 2 ⁿ who n is the resolution in bits.DRAMDynamic Random Access Memory. See RAM.DriftA gradual movement away from the defined input/output conditi over a period of time.Driver SoftwareA program that acts as the interface between a higher level codi structure and the lower level hardware/firmware component a computer.DSPDigital Signal Processing.DSRData Set Ready. An RS-232 modem interface control signal whi indicates that the terminal is ready for transmission.DTEData Terminal Equipment. Devices acting as data source, data sir or both.Dual-ported RAMAllows acquired data to be transferred from on-board memory the computer's memory while data acquisition is occurring.DuplexThe ability to send and receive data over the sar communications line.Dynamic RangeThe difference in decibels between the overload or maximum a minimum discernible signal level in a system.EBCDICExtended Binary Coded Decimal Interchange Code. An 8-bit charac code used primarily in IBM equipment. The code allows for 2 different bit patterns.EEPROMElectrically Erasable Programmable Read Only Memory. Th memory unit can be erased by applying an electrical signal to t EEPROM and then reprogrammed.	DNA	Distributed Network Architecture.	
DPIDots per Inch.DPLLDigital Phase Locked Loop.DRDynamic Range. The ratio of the full scale range (FSR) of a di converter to the smallest difference it can resolve. DR = 2" whe n is the resolution in bits.DRAMDynamic Random Access Memory. See RAM.DriftA gradual movement away from the defined input/output conditi over a period of time.Driver SoftwareA program that acts as the interface between a higher level codi structure and the lower level hardware/firmware component a computer.DSPDigital Signal Processing.DSRData Set Ready. An RS-232 modem interface control signal whi indicates that the terminal is ready for transmission.DTEData Terminal Equipment. Devices acting as data source, data sir or both.Dual-ported RAMAllows acquired data to be transferred from on-board memory the computer's memory while data acquisition is occurring.DuplexThe ability to send and receive data over the sar communications line.Dynamic RangeThe difference in decibels between the overload or maximum a minimum discernible signal level in a system.EBCDICExtended Binary Coded Decimal Interchange Code. An 8-bit charac code used primarily in IBM equipment. The code allows for 2 different bit patterns.EEPROMElectrically Erasable Programmable Read Only Memory. Th memory unit can be erased by applying an electrical signal to t EEPROM and then reprogrammed.	Doppler	The change in observed frequency of a signal caused by the emitting device moving with respect to the observing device.	5
DPLLDigital Phase Locked Loop.DRDynamic Range. The ratio of the full scale range (FSR) of a day converter to the smallest difference it can resolve. DR = 2 ⁿ when n is the resolution in bits.DRAMDynamic Random Access Memory. See RAM.DriftA gradual movement away from the defined input/output conditi over a period of time.Driver SoftwareA program that acts as the interface between a higher level codi structure and the lower level hardware/firmware component a computer.DSPDigital Signal Processing.DSRData Set Ready. An RS-232 modem interface control signal whi indicates that the terminal is ready for transmission.DTEData Terminal Equipment. Devices acting as data source, data sir or both.DuplexThe ability to send and receive data over the sar communications line.Dynamic RangeThe difference in decibels between the overload or maximum a minimum discernible signal level in a system.EBCDICExtended Binary Coded Decimal Interchange Code. An 8-bit charac code used primarily in IBM equipment. The code allows for 2 different bit patterns.EEPROMElectrically Erasable Programmable Read Only Memory. TI memory unit can be erased by applying an electrical signal to t EEPROM and then reprogrammed.	Downlink	The path from a satellite to an earth station.	
DRDynamic Range. The ratio of the full scale range (FSR) of a da converter to the smallest difference it can resolve. DR = 2 ⁿ when n is the resolution in bits.DRAMDynamic Random Access Memory. See RAM.DriftA gradual movement away from the defined input/output conditi over a period of time.Driver SoftwareA program that acts as the interface between a higher level codi structure and the lower level hardware/firmware component a computer.DSPDigital Signal Processing.DSRData Set Ready. An RS-232 modem interface control signal whi indicates that the terminal is ready for transmission.DTEData Terminal Equipment. Devices acting as data source, data sir or both.Dual-ported RAMAllows acquired data to be transferred from on-board memory the computer's memory while data acquisition is occurring.DuplexThe ability to send and receive data over the sar communications line.Dynamic RangeThe difference in decibels between the overload or maximum a minimum discernible signal level in a system.EBCDICExtended Binary Coded Decimal Interchange Code. An 8-bit charac code used primarily in IBM equipment. The code allows for 2 different bit patterns.EEPROMElectrically Erasable Programmable Read Only Memory. TI memory unit can be erased by applying an electrical signal to t EEPROM and then reprogrammed.	DPI	Dots per Inch.	
converter to the smallest difference it can resolve. DR = 2 ⁿ when n is the resolution in bits.DRAMDynamic Random Access Memory. See RAM.DriftA gradual movement away from the defined input/output conditi over a period of time.Driver SoftwareA program that acts as the interface between a higher level codi structure and the lower level hardware/firmware component a computer.DSPDigital Signal Processing.DSRData Set Ready. An RS-232 modem interface control signal whi indicates that the terminal is ready for transmission.DTEData Terminal Equipment. Devices acting as data source, data sir or both.Dual-ported RAMAllows acquired data to be transferred from on-board memory the computer's memory while data acquisition is occurring.DuplexThe ability to send and receive data over the sar communications line.Dynamic RangeThe difference in decibels between the overload or maximum a minimum discernible signal level in a system.EBCDICExtended Binary Coded Decimal Interchange Code. An 8-bit charac code used primarily in IBM equipment. The code allows for 2 different bit patterns.EEPROMElectrically Erasable Programmable Read Only Memory. TI memory unit can be erased by applying an electrical signal to t EEPROM and then reprogrammed.	DPLL	Digital Phase Locked Loop.	
DriftA gradual movement away from the defined input/output conditi over a period of time.Driver SoftwareA program that acts as the interface between a higher level codi structure and the lower level hardware/firmware component a computer.DSPDigital Signal Processing.DSRData Set Ready. An RS-232 modem interface control signal whi indicates that the terminal is ready for transmission.DTEData Terminal Equipment. Devices acting as data source, data sir or both.Dual-ported RAMAllows acquired data to be transferred from on-board memory the computer's memory while data acquisition is occurring.DuplexThe ability to send and receive data over the sar communications line.Dynamic RangeThe difference in decibels between the overload or maximum a minimum discernible signal level in a system.EBCDICExtended Binary Coded Decimal Interchange Code. An 8-bit charac code used primarily in IBM equipment. The code allows for 2 different bit patterns.EEPROMElectrically Erasable Programmable Read Only Memory. TI memory unit can be erased by applying an electrical signal to t EEPROM and then reprogrammed.	DR	Dynamic Range. The ratio of the full scale range (FSR) of a data converter to the smallest difference it can resolve. $DR = 2^n$ where n is the resolution in bits.	
over a period of time.Driver SoftwareA program that acts as the interface between a higher level codi structure and the lower level hardware/firmware component a computer.DSPDigital Signal Processing.DSRData Set Ready. An RS-232 modem interface control signal whi indicates that the terminal is ready for transmission.DTEData Terminal Equipment. Devices acting as data source, data sir or both.Dual-ported RAMAllows acquired data to be transferred from on-board memory the computer's memory while data acquisition is occurring.DuplexThe ability to send and receive data over the sar communications line.Dynamic RangeThe difference in decibels between the overload or maximum a minimum discernible signal level in a system.EBCDICExtended Binary Coded Decimal Interchange Code. An 8-bit charac code used primarily in IBM equipment. The code allows for 2 different bit patterns.EEPROMElectrically Erasable Programmable Read Only Memory. TI memory unit can be erased by applying an electrical signal to t EEPROM and then reprogrammed.	DRAM	Dynamic Random Access Memory. See RAM.	
Structure and the lower level hardware/firmware component a computer.DSPDigital Signal Processing.DSRData Set Ready. An RS-232 modem interface control signal whi indicates that the terminal is ready for transmission.DTEData Terminal Equipment. Devices acting as data source, data sir or both.Dual-ported RAMAllows acquired data to be transferred from on-board memory the computer's memory while data acquisition is occurring.DuplexThe ability to send and receive data over the sar communications line.Dynamic RangeThe difference in decibels between the overload or maximum a minimum discernible signal level in a system.EBCDICExtended Binary Coded Decimal Interchange Code. An 8-bit charac code used primarily in IBM equipment. The code allows for 2 different bit patterns.EEPROMElectrically Erasable Programmable Read Only Memory. TI memory unit can be erased by applying an electrical signal to t EEPROM and then reprogrammed.	Drift	A gradual movement away from the defined input/output condition over a period of time.	1
DSRData Set Ready. An RS-232 modem interface control signal whi indicates that the terminal is ready for transmission.DTEData Terminal Equipment. Devices acting as data source, data sir or both.Dual-ported RAMAllows acquired data to be transferred from on-board memory the computer's memory while data acquisition is occurring.DuplexThe ability to send and receive data over the sar communications line.Dynamic RangeThe difference in decibels between the overload or maximum a minimum discernible signal level in a system.EBCDICExtended Binary Coded Decimal Interchange Code. An 8-bit charac code used primarily in IBM equipment. The code allows for 2 different bit patterns.EEPROMElectrically Erasable Programmable Read Only Memory. Th memory unit can be erased by applying an electrical signal to t EEPROM and then reprogrammed.	Driver Software	A program that acts as the interface between a higher level coding structure and the lower level hardware/firmware component of a computer.	·
 DTE indicates that the terminal is ready for transmission. DTE Data Terminal Equipment. Devices acting as data source, data sir or both. Dual-ported RAM Allows acquired data to be transferred from on-board memory the computer's memory while data acquisition is occurring. Duplex The ability to send and receive data over the sar communications line. Dynamic Range The difference in decibels between the overload or maximum a minimum discernible signal level in a system. EBCDIC Extended Binary Coded Decimal Interchange Code. An 8-bit charac code used primarily in IBM equipment. The code allows for 2 different bit patterns. EEPROM Electrically Erasable Programmable Read Only Memory. Th memory unit can be erased by applying an electrical signal to t EEPROM and then reprogrammed. 	DSP	Digital Signal Processing.	
or both.Dual-ported RAMAllows acquired data to be transferred from on-board memory the computer's memory while data acquisition is occurring.DuplexThe ability to send and receive data over the sar communications line.Dynamic RangeThe difference in decibels between the overload or maximum a minimum discernible signal level in a system.EBCDICExtended Binary Coded Decimal Interchange Code. An 8-bit charac code used primarily in IBM equipment. The code allows for 2 different bit patterns.EEPROMElectrically Erasable Programmable Read Only Memory. Th memory unit can be erased by applying an electrical signal to t 	DSR	Data Set Ready. An RS-232 modem interface control signal which indicates that the terminal is ready for transmission.	1
DuplexThe ability to send and receive data over the sar communications line.Dynamic RangeThe difference in decibels between the overload or maximum a minimum discernible signal level in a system.EBCDICExtended Binary Coded Decimal Interchange Code. An 8-bit charac code used primarily in IBM equipment. The code allows for 2 different bit patterns.EEPROMElectrically Erasable Programmable Read Only Memory. Th memory unit can be erased by applying an electrical signal to t EEPROM and then reprogrammed.	DTE	Data Terminal Equipment. Devices acting as data source, data sink, or both.	,
ImageCommunications line.Dynamic RangeThe difference in decibels between the overload or maximum a minimum discernible signal level in a system.EBCDICExtended Binary Coded Decimal Interchange Code. An 8-bit charac code used primarily in IBM equipment. The code allows for 2 different bit patterns.EEPROMElectrically Erasable Programmable Read Only Memory. Th memory unit can be erased by applying an electrical signal to t EEPROM and then reprogrammed.	Dual-ported RAM	Allows acquired data to be transferred from on-board memory to the computer's memory while data acquisition is occurring.)
EBCDICExtended Binary Coded Decimal Interchange Code. An 8-bit charac code used primarily in IBM equipment. The code allows for 2 different bit patterns.EEPROMElectrically Erasable Programmable Read Only Memory. Th memory unit can be erased by applying an electrical signal to t 	Duplex	5	;
EEPROMElectrically Erasable Programmable Read Only Memory. The memory unit can be erased by applying an electrical signal to the EEPROM and then reprogrammed.	Dynamic Range	The difference in decibels between the overload or maximum and minimum discernible signal level in a system.	l
memory unit can be erased by applying an electrical signal to t EEPROM and then reprogrammed.	EBCDIC	Extended Binary Coded Decimal Interchange Code. An 8-bit character code used primarily in IBM equipment. The code allows for 256 different bit patterns.	
ECA Enhanced Crambias Adapter A commuter display standard that mayin	EEPROM	Electrically Erasable Programmable Read Only Memory. This memory unit can be erased by applying an electrical signal to the EEPROM and then reprogrammed.	
	EGA	Enhanced Graphics Adapter. A computer display standard that provides a resolution of 640 by 350 pixels, a palette of 64 colors, and the ability to display as many as 16 colors at one time.	
	EIA	Electronic Industries Association. An organisation in the USA specialising in the electrical and functional characteristics of interface equipment.	

	Engineers Pocket Guide
EIA-232-C	Interface between DTE and DCE, employing serial binary data exchange. Typical maximum specifications are 15m at 19200 Baud.
EIA-423	Interface between DTE and DCE, employing the electrical characteristics of unbalanced voltage digital interface circuits.
EIA-449	General purpose 37 pin and 9 pin interface for DCE and DTE employing serial binary interchange.
EIA-485	The recommended standard of the EIA that specifies the electrical characteristics of drivers and receivers for use in balanced digital multipoint systems.
EIRP	Effective Isotropic Radiated Power. The effective power radiated from a transmitting antenna when an isotropic radiator is used to determine the gain of the antenna.
EISA	Enhanced Industry Standard Architecture.
EMI/RFI	Electro-Magnetic Interference or Radio Frequency Interference. Background 'noise' capable of modifying or destroying data transmission.
EMS	Expanded Memory Specification.
Emulation	The imitation of a computer system performed by a combination of hardware and software that allows programs to run between incompatible systems.
Enabling	The activation of a function of a device by a defined signal.
Encoder	A circuit which changes a given signal into a coded combination for purposes of optimum transmission of the signal.
ENQ	Enquiry (ASCII Control-E).
EOT	End of Transmission (ASCII Control-D).
EPROM	Erasable Programmable Read Only Memory. Non-volatile semiconductor memory that is erasable in a ultra violet light and reprogrammable.
Equalizer	The device which compensates for the unequal gain characteristic of the signal received.
Error Rate	The ratio of the average number of bits that will be corrupted to the total number of bits that are transmitted for a data link or system.
Error	The difference between the setpoint and the measured value.
ESC	Escape (ASCII character).
ESD	Electrostatic Discharge.
Ethernet	Name of a widely used Local Area Network (LAN), based on the CSMA/CD bus access method (IEEE 802.3).
ETX	End of Text (ASCII control-C).

Even Parity	A data verification method normally implemented in hardware in which each character (and the parity bit) must have an even number of ON bits.
External Pulse Trigger	Many of the A/D boards allow sampling to be triggered by a voltage pulse from an external source.
Fan In	The load placed on a signal line by a logic circuit input.
Fan Out	The measure of drive capability of a logic circuit output.
Farad	Unit of capacitance whereby a charge of one coulomb produces a one volt potential difference.
FCC	Federal Communications Commission (USA).
FCS	Frame Check Sequence. A general term given to the additional bits appended to a transmitted frame or message by the source to enable the receiver to detect possible transmission errors.
FDM	Frequency Division Multiplexer. A device that divides the available transmission frequency range in narrower bands, each of which is used for a separate channel.
Feedback	A part of the output signal being fed back to the input of the amplifier circuit.
Field	One half of a video image (frame) consisting of 312.5 lines (for PAL). There are two fields in a frame. Each is shown alternately every $1/25$ of a second (for PAL).
FIFO	First in, First Out.
Filled Cable	A telephone cable construction in which the cable core is filled with a material that will prevent moisture from entering or passing along the cable.
FIP	Factory Instrumentation Protocol.
Firmware	A computer program or software stored permanently in PROM or ROM or semi-permanently in EPROM.
Flame Retardancy	The ability of a material not to propagate flame once the flame source is removed.
Floating	An electrical circuit that is above the earth potential.
Flow Control	The procedure for regulating the flow of data between two devices preventing the loss of data once a device's buffer has reached its capacity.
Frame	A full video image comprising two fields. A PAL frame has a total of 625 lines (an NTSC frame has 525 lines).
Frame	The unit of information transferred across a data link. Typically, there are control frames for link management and information frames for the transfer of message data.

Frame Grabber	An image processing peripheral that samples, digitizes and stores a camera frame in computer memory.
Frequency Modulation	A modulation technique (abbreviated to FM) used to allow data to be transmitted across an analog network where the frequency is varied between two levels - one for binary '0' and one for binary '1'.
	Also known as Frequency Shift Keying (or FSK).
Frequency	Refers to the number of cycles per second.
Frequency Domain	The displaying of electrical quantities versus frequency.
Fringing	The unwanted bordering of an object or character with weak colors when there should be a clearly delineated edge.
Full Duplex	Simultaneous two way independent transmission in both directions (4 wire). See Duplex.
G	Giga (metric system prefix - 10^9).
Gain of Antenna	The difference in signal strengths between a given antenna and a reference isotropic antenna.
Gain	Amplification; applied to an incoming signal, gain acts as a multiplication factor on the signal, enabling a board to use signals that would otherwise be too weak.
	For example, when set to a gain of 10, a board with a range of $+5$ V can use raw input signals as low as $+0.5$ V ($+500$ mV); with a gain of 20, the range extends down to $+250$ mV.
Gateway	A device to connect two different networks which translates the different protocols.
Genlock	This is the process of synchronising one video signal to a master reference, ensuring that all signals will be compatible or related to one another.
Geostationary	A special earth orbit that allows a satellite to remain in a fixed position above the equator.
Geosynchronous	Any earth orbit in which the time required for one revolution of a satellite is an integral portion of a sidereal day.
GPIB	General Purpose Interface Bus. An interface standard used for parallel data communication, usually used for controlling electronic instruments from a computer. Also designated IEEE-488 standard.
Graphics Mode	In graphics mode each pixel on a display screen is addressable, and each pixel has a horizontal (or X) and a vertical (or Y) co-ordinate.
Grey Scale	In image processing, the range of available grey levels. In an 8-bit system, the grey scale contains values from 0 to 255.

Ground	An electrically neutral circuit having the same potential as the earth. A reference point for an electrical system also intended for safety purposes.
Half Duplex	Transmissions in either direction, but not simultaneously.
Half Power Point	The point in a Power versus frequency curve which is half the power level of the peak power (also called the 3dB point).
Hamming Distance	A measure of the effectiveness of error checking. The higher the Hamming Distance (HD) index, the safer is the data transmission.
Handshake Lines	Dedicated signals which allow two different devices to exchange data under asynchronous hardware control.
Handshaking	Exchange of predetermined signals between two devices establishing a connection.
Harmonic	An oscillation of a periodic quantity whose frequency is an integral multiple of the fundamental frequency. The fundamental frequency and the harmonics together form a Fourier series of the original wave form.
Harmonic Distortion	Distortion caused by the presence of harmonics in the desired signal.
HDLC	High Level Data Link Control. The international standard communication protocol defined by ISO to control the exchange of data across either a point-to-point data link or a multidrop data link.
Hertz (Hz)	A term replacing cycles per second as a unit of frequency.
Hex	Hexadecimal.
Hexadecimal Number	A base 16 number system commonly used with microprocessor systems.
HF	High Frequency.
High Pass	Generally referring to filters which allow signals above a specified frequency to pass but attenuate signals below this specified frequency.
High-Pass Filter	See HPF.
Histogram	A graphic representation of a distribution function, such as frequency, by means of rectangles whose widths represent the intervals into which the range of observed values is divided and whose heights represent the number of observations occurring in each interval.
Horn	A moderate-gain wide-beamwidth antenna.
Host	This is normally a computer belonging to a user that contains (hosts) the communication hardware and software necessary to connect the computer to a data communications network.
HPF	High-Pass Filter. A filter processing one transmission band that extends from a cutoff frequency (other than zero) to infinity.

Engineers	Pocket	Guide
-----------	--------	-------

HPIB	Hewlett-Packard Interface Bus; trade name used by Hewlett-Packard for its implementation of the IEEE-488 standard.
I/O Address	A method that allows the CPU to distinguish between different boards in a system. All boards must have different addresses.
IEC	International Electrotechnical Commission.
IEE	Institution of Electrical Engineers.
IEEE	Institute of Electrical and Electronic Engineers. A US-based international professional society that issues its own standards and, which is a member of ANSI and ISO.
Illumination Component	An amount of source light incident on the object being viewed.
Impedance	The total opposition that a circuit offers to the flow of alternating current or any other varying current at a particular frequency. It is a combination of resistance R and reactance X, measured in ohms.
Individual Gain per Channel	A system allowing an individual gain level for each input channel, thereby allowing a much wider range of input levels and types without sacrificing accuracy on low-level signals.
Inductance	The property of a circuit or circuit element that opposes a change in current flow, thus causing current changes to lag behind voltage changes. It is measured in henrys.
Insulation Resistance (IR)	That resistance offered by an insulation to an impressed dc voltage, tending to produce a leakage current though the insulation.
Interface	A shared boundary defined by common physical interconnection characteristics, signal characteristics and measuring of interchanged signals.
Interlace	This is the display of two fields alternately with one field filling in the blank lines of the other field so that they interlock. The PAL standard displays 25 video frames per second.
Interlaced	Interlaced - describing the standard television method of raster scanning, in which the image is the product of two fields, each of which is a series of successively scanned lines separated by the equivalent of one line. Thus adjacent lines belong to different fields.
Interrupt	An external event indicating that the CPU should suspend its current task to service a designated activity.
Interrupt Handler	The section of the program that performs the necessary operation to service an interrupt when it occurs.
IP	Internet Protocol.
ISA	Industry Standard Architecture (for IBM Personal Computers).
ISA	Instrument Society of America.
ISB	Intrinsically Safe Barrier.

	ISDN	Integrated Services Digital Network. A fairly recent generation of world- wide telecommunications networks that utilize digital techniques for both transmission and switching.
		It supports both voice and data communications.
	ISO	International Standards Organisation.
	Isolation	Electrical separation of two circuits. For example, optical isolation allows a high-voltage signal to be transferred to a low-voltage input without electrical interactions.
	Isotropic Antenna	A reference antenna that radiates energy in all directions from a point source.
G	ISR	Interrupt Service Routine. See Interrupt Handler.
	ITU	International Telecommunications Union.
	Jabber	Garbage that is transmitted when a LAN node fails and then continuously transmits.
	Jumper	A wire connecting one or more pins (on the one end of a cable only, for example).
	k (kilo)	Typically multiples of a thousand (e.g. 1 kilometer = 1000 meters)
	К	In computer terminology, a K is $2^{10}=1024$. This distinguishes it from the SI unit k (kilo) which is 1000.
	LAN	Local Area Network. A data communications system confined to a limited geographic area typically about 10 kms with moderate to high data rates (100kbps to 50 Mbps).
		Some type of switching technology is used, but common carrier circuits are not used.
	LCD	Liquid Crystal Display. A low power display system used on many laptops and other digital equipment.
	LDM	Limited Distance Modem. A signal converter which conditions and boosts a digital signal so that it may be transmitted further than a standard EIA-232 signal.
	Leased (or Private) Line	A private telephone line without inter-exchange switching arrangements.
	LED	Light Emitting Diode. A semi-conductor light source that emits visible light or infra red radiation.
	LF	Line Feed (ASCII Control-J).
	Line Driver	A signal converter that conditions a signal to ensure reliable transmission over an extended distance.
	Line Turnaround	The reversal of transmission direction from transmitter to receiver or vice versa when a half duplex circuit is used.
	Linearity	A relationship where the output is directly proportional to the input.

Link Layer	Layer 2 of the OSI reference model; also known as the data link layer.
Listener	A device on the GPIB bus that receives information from the bus.
LLC	Logical Link Control (IEEE 802.2).
Loaded Line	A telephone line equipped with loading coils to add inductance in order to minimize amplitude distortion.
Long Wire	A horizontal wire antenna that is one wavelength or greater in size.
Loop Resistance	The measured resistance of two conductors forming a circuit.
Loopback	Type of diagnostic test in which the transmitted signal is returned to the sending device after passing through all, or a portion, of a data communication link or network.
	A loopback test permits the comparison of a returned signal with the transmitted signal.
Low Pass	Generally referring to filters which allow signals below a specified frequency to pass but attenuate a signal above this specified frequency.
Low-Pass Filter	See LPF.
LPF	Low-Pass Filter. A filter processing one transmission band, extending from zero to a specific cutoff frequency.
LSB	Least Significant Byte or Least Significant Bit.
Luminance	The black and white portion of a video signal which supplies brightness and detail for the picture.
LUT	Look-Up Table. This refers to the memory that stores the values for the point processes. Input pixel values are those for the original image whilst the output values are those displayed on the monitor as altered by the chosen point processes.
Lux	SI unit of luminous incidence of illuminance, equal to one lumen per square metre.
Lux-second	SI unit of light exposure.
m	meter. Metric system unit for length.
М	Mega. Metric system prefix for 10^6 .
MAC	Media Access Control (IEEE 802).
Manchester Encoding	Digital technique (specified for the IEEE-802.3 Ethernet baseband network standard) in which each bit period is divided into two complementary halves; a negative to positive voltage transition in the middle of the bit period designates a binary "1", whilst a positive to negative transition represents a "0". The encoding technique also allows the receiving device to recover the transmitted clock from

— 44 —

the incoming data stream (self clocking).

МАР	Manufacturing Automation Protocol. A suite of network protocols originated by General Motors which follow the seven layers of the OSI model. A reduced implementation is referred to as a mini-MAP.
Mark	This is equivalent to a binary 1.
Mask	A structure covering certain portions of a photo-sensitive medium during photographic processing.
Masking	Setting portions of an image at a constant value, either black or white. Also the process of outlining an image and then matching it to test images.
Master/Slave	Bus access method whereby the right to transmit is assigned to one device only, the Master, and all the other devices, the Slaves may only transmit when requested.
Master Oscillator	The primary oscillator for controlling a transmitter or receiver frequency. The various types are: Variable Frequency Oscillator (VFO); Variable Crystal Oscillator (VXO); Permeability Tuned Oscillator (PTO); Phase Locked Loop (PLL); Linear Master Oscillator (LMO) or frequency synthesizer.
Media Access Unit	Referred to often as MAU. This is the Ethernet transceiver unit situated on the coaxial cable which then connects to the terminal with a drop cable.
Microwave	AC signals having frequencies of 1 GHz or more.
MIPS	Million Instructions per second.
MMS	Manufacturing Message Services. A protocol entity forming part of the application layer. It is intended for use specifically in the manufacturing or process control industry. It enables a supervisory computer to control the operation of a distributed community of computer based devices.
Modem	MODulator - DEModulator. A device used to convert serial digital data from a transmitting terminal to a signal suitable for transmission over a telephone channel or to reconvert the transmitted signal to serial digital data for the receiving terminal.
Modem Eliminator	A device used to connect a local terminal and a computer port in lieu of the pair of modems to which they would ordinarily connect, allow DTE to DTE data and control signal connections otherwise not easily achieved by standard cables or connections.
Modulation Index	The ratio of the frequency deviation of the modulated wave to the frequency of the modulating signal.
Morphology	The study of a structure/form of object in an image.
MOS	Metal Oxide Semiconductor.
MOV	Metal Oxide Varistor.

MSB	Most Significant Byte or Most Significant Bit.
MTBF	Mean Time Between Failures.
MTTR	Mean Time To Repair.
Multidrop	A single communication line or bus used to connect three or more points.
Multiplexer (MUX)	A device used for division of a communication link into two or more channels, either by using frequency division or time division.
Multiplexer	A technique in which multiple signals are combined into one channel. They can then be demultiplexed back into the original components.
NAK	Negative Acknowledge (ASCII Control-U).
Narrowband	A device that can only operate over a narrow band of frequencies.
Negative True Logic	The inversion of the normal logic where the negative state is considered to be TRUE (or 1) and the positive voltage state is considered to be FALSE (or 0).
Network Layer	Layer 3 in the OSI model; the logical network entity that services the transport layer responsible for ensuring that data passed to it from the transport layer is routed and delivered throughout the network.
Network Architecture	A set of design principles including the organisation of functions and the description of data formats and procedures used as the basis for the design and implementation of a network (ISO).
Network	An interconnected group of nodes or stations.
Network Topology	The physical and logical relationship of nodes in a network; the schematic arrangement of the links and nodes of a network typically in the form of a star, ring, tree or bus topology.
NMRR	Normal Mode Rejection Ratio - The ability of a board to filter out noise from external sources, such as AC power lines. NMRR filtering compensates for transient changes in the incoming signal to provide greater accuracy. The higher the NMRR, the better the filtering of incoming data will be.
Node	A point of interconnection to a network.
Noise	A term given to the extraneous electrical signals that may be generated or picked up in a transmission line. If the noise signal is large compared with the data carrying signal, the latter may be corrupted resulting in transmission errors.
Non-linearity	A type of error in which the output from a device does not relate to the input in a linear manner.
NRZ	Non Return to Zero. Pulses in alternating directions for successive 1 bits but no change from existing signal voltage for 0 bits.

NRZI	Non Return to Zero Inverted.
NTSC	National Television System Committee (USA). A television standard specifying 525 lines and 60 fields per second.
Null Modem	A device that connects two DTE devices directly by emulating the physical connections of a DCE device.
Number of Channels	This is the number of input lines a board can sample. Single-ended inputs share the same ground connection, while differential inputs have individual two-wire inputs for each incoming signal, allowing greater accuracy and signal isolation. See also multiplexer.
Nyquist Sampling Theorem	In order to recover all the information about a specified signal it must be sampled at least at twice the maximum frequency component of the specified signal.
OCR	Optical Character Recognition, optical character reader.
ohm	Unit of resistance such that a constant current of one ampere produces a potential difference of one volt across a conductor.
OLUT	Output Look-Up Table.
On-board Memory	Incoming data is stored in on-board memory before being dumped into the PC's memory. On a high-speed board, data is acquired at a much higher rate than can be written into PC memory, so it is stored in the on-board buffer memory.
Optical Isolation	Two networks with no electrical continuity in their connection because an optoelectronic transmitter and receiver has been used.
OR	Outside Radius.
OSI	Open Systems Interconnection. A set of defined protocol layers with a standardized interface which allows equipment from different manufacturers to be connected.
Output	An analog or digital output control type signal from the PC to the external 'real world'.
Overlay	One video signal superimposed on another, as in the case of computer-generated text over a video picture.
Packet	A group of bits (including data and call control signals) transmitted as a whole on a packet switching network. Usually smaller than a transmission block.
PAD	Packet Access Device. An interface between a terminal or computer and a packet switching network.
PAL	Phase Alternating Lines. This is the television standard used in Europe and Australia. The PAL standard is 25 frames per second with 625 lines.

Parallel Transmission	The transmission model where multiple data bits are sent simultaneously over separate parallel lines. Accurate synchronisation is achieved by using a timing (strobe) signal. Parallel transmission is usually unidirectional; an example would be the Centronics interface to a printer.
Parametric Amplifier	An inverting parametric device for amplifying a signal without frequency translation from input to output.
Parasitic	Undesirable electrical parameter in a circuit such as oscillations or capacitance.
Parity Bit	A bit that is set to a "0" or "1" to ensure that the total number of 1 bits in the data and parity fields are even or odd.
Parity Check	The addition of non information bits that make up a transmission block to ensure that the total number of data and parity bits is always even (even parity) or odd (odd parity).
	Used to detect transmission errors but rapidly losing popularity because of its weakness in detecting errors.
Passive Filter	A circuit using only passive electronic components such as resistors, capacitors and inductors.
Passive Device	Device that must draw its power from connected equipment.
Path Loss	The signal loss between transmitting and receiving antennas.
PBX	Private Branch Exchange.
PCIP	Personal Computer Instrument Products.
РСМ	Pulse Code Modulation. The sampling of a signal and encoding the amplitude of each sample into a series of uniform pulses.
PDU	Protocol Data Unit.
РЕР	Peak Envelope Power. Maximum amplitude that can be achieved with any combination of signals.
Perigee	The point in an elliptical orbit that is closest to earth.
Peripherals	The input/output and data storage devices attached to a computer e.g. disk drives, printers, keyboards, display, communication boards, etc.
Phase Shift Keying	A modulation technique (also referred to as PSK) used to convert binary data into an analog form comprising a single sinusoidal frequency signal whose phase varies according to the data being transmitted.
Phase Modulation	The sine wave or carrier has its phase changed in accordance with the information to be transmitted.
Physical Layer	Layer 1 of the ISO/OSI Reference Model, concerned with the electrical and mechanical specifications of the network termination equipment.

PIA	Peripheral Interface Adapter. Also referred to as PPI (Programmable Peripheral Interface).
Pixel	One element of a digitized image, sometimes called picture element, or pel.
PLC	Programmable Logic Controller.
PLL	Phase Locked Loop
Point to Point	A connection between only two items of equipment.
Polar Orbit	The path followed when the orbital plane includes the north and south poles.
Polarisation	The direction of an electric field radiated from an antenna.
Polling	A means of controlling I/O devices on a multipoint line in which the CPU queries ('polls') the devices at regular intervals to check for data awaiting transfer (to the CPU).
	Slower and less efficient than interrupt driven I/O operations.
Polyethylene	A family of insulators derived from the polymerisation of ethylene gas and characterized by outstanding electrical properties, including high IR, low dielectric constant, and low dielectric loss across the frequency spectrum.
Polyvinyl Chloride (PVC)	A general purpose family of insulations whose basic constituent is polyvinyl chloride or its copolymer with vinyl acetate.
	Plasticisers, stabilizers, pigments and fillers are added to improve mechanical and/ or electrical properties of this material.
Port	A place of access to a device or network, used for input/output of digital and analog signals.
PPI	See PIA.
Presentation Layer	Layer 6 of the ISO/OSI Reference Model, concerned with negotiation of a suitable transfer syntax for use during an application. If this is different from the local syntax, the translation is to/from this syntax.
Pretrigger	Boards with 'pretrigger' capability keep a continuous buffer filled with data, so when the trigger conditions are met, the sample includes the data leading up to the trigger condition.
Profibus	Process Field Bus developed by a consortium of mainly German companies with the aim of standardisation.
Program I/0	The standard method of memory access, where each piece of data is assigned to a variable and stored individually by the PC's processor.

— 49 —

Programmable Gain	Using an amplifier chip on an A/D board, the incoming analog signal is increased by the gain multiplication factor. For example; if the input signal is in the range of -250 mV to +250 mV, the voltage after the amplifier chip set to a gain of 10 would be -2.5 V to +2.5 V.
PROM	Programmable Read Only Memory. This is programmed by the manufacturer as a fixed data or program which cannot easily be changed by the user.
Protocol Entity	The code that controls the operation of a protocol layer.
Protocol	A formal set of conventions governing the formatting, control procedures and relative timing of message exchange between two communicating systems.
PSDN	Public Switched Data Network. Any switching data communications system, such as Telex and public telephone networks, which provides circuit switching to many customers.
PSTN	Public Switched Telephone Network. This is the term used to describe the (analog) public telephone network.
PTT	Post, Telephone and Telecommunications Authority.
Public Switched Network	Any switching communications system - such as Telex and public telephone networks - that provides circuit switching to many customers.
Pulse Input	A square wave input from a real world device such as a flow meter, which sends pulses proportional to the flow rate.
QAM	Quadrature Amplitude Modulation.
QPSK	Quadrature Phase Shift Keying.
Quagi	An antenna consisting of both full wavelength loops (quad) and Yagi elements.
R/W	Read/Write.
RAM	Random Access Memory. Semiconductor read/write volatile memory. Data is lost if the power is turned off.
RAMDAC	Random Access Memory Digital-to-Analog Converter.
Range	The difference between the upper and lower limits of the measured value.
Range Select	The full-scale range a board uses is selected by one of three methods: through the appropriate software, by a hardware jumper on the board, or through the use of an external reference voltage.
Raster	The pattern of lines traced by rectilinear scanning in display systems.
Reactance	The opposition offered to the flow of alternating current by inductance or capacitance of a component or circuit.

Real-time	A system is capable of operating in real-time when it is fast enough to react to the real-world events.
Reflectance Component	The amount of light reflected by an object in the scene being viewed.
Refresh rate	The speed at which information is updated on a computer display (CRT).
Repeater	An amplifier which regenerates the signal and thus expands the network.
Resistance	The ratio of voltage to electrical current for a given circuit measured in ohms.
Resolution	The number of bits in which a digitized value will be stored. This represents the number of divisions into which the full-scale range will be divided; for example, a 0-10 V range with a 12-bit resolution will have $4096(2^{12})$ divisions of 2.44mV each.
Response Time	The elapsed time between the generation of the last character of a message at a terminal and the receipt of the first character of the reply. It includes terminal delay and network delay.
RF	Radio Frequency.
RFI	Radio Frequency Interference.
RGB	Red/Green/Blue. An RGB signal has four separate elements; red/green/ blue and sync. This results in a cleaner image than with composite signals due to the lower level of distortion and interference.
Ring	Network topology commonly used for interconnection of communities of digital devices distributed over a localized area, e.g. a factory or office block. Each device is connected to its nearest neighbours until all the devices are connected in a closed loop or ring. Data are transmitted in one direction only.
	As each message circulates around the ring, it is read by each device connected in the ring.
Ringing	An undesirable oscillation or pulsating current.
Rise Time	The time required for a waveform to reach a specified value from some smaller value.
RLE	Run Length Encoder. A digital image method whereby the first grey level of each sequential point-by-point sample and its position in the succession of grey levels is encoded. It is used where there is a tendency for long runs of repeated digitized grey levels to occur.
RMS	Root Mean Square.
ROI	Region of Interest.

	Engineers Pocket Guide
ROM	Read Only Memory. Computer memory in which data can be routinely read but written to only once using special means when the ROM is manufactured. A ROM is used for storing data or programs on a permanent basis.
Router	A linking device between network segments which may differ in Layers 1, 2a and 2b of the ISO/OSI Reference Model.
RS	Recommended Standard, for example, RS-232C. More recent designations use EIA, for example, EIA-232C.
RS-232C	Interface between DTE and DCE, employing serial binary data exchange. Typical maximum specifications are 50 feet (15m) at 19200 baud.
RS-422	Interface between DTE and DCE, employing the electrical characteristics of balanced voltage interface circuits.
RS-423	Interface between DTE and DCE, employing the electrical characteristics of unbalanced voltage digital interface circuits.
RS-449	General purpose 37-pin and 9-pin interface for DCE and DTE employing serial binary interchange.
RS-485	The recommended standard of the EIA that specifies the electrical characteristics of drivers and receives for use in balanced digital multipoint systems.
RTU	Remote Terminal Unit. Terminal Unit situated remotely from the main control system.
S-Video	The luminance and chrominance elements of a video signal are isolated from each other, resulting in a far cleaner image with greater resolution.
SAA	Standards Association of Australia.
SAP	Service Access Point.
SDLC	Synchronous Data Link Control. IBM standard protocol superseding the bisynchronous standard.
Selectivity	A measure of the performance of a circuit in distinguishing the desired signal from those at other frequencies.
Self-calibrating	A self-calibrating board has an extremely stable on-board reference which is used to calibrate A/D and D/A circuits for higher accuracy.
Self-diagnostics	On-board diagnostic routine which tests most, if not all, of a board's functions at power-up or on request.
Serial Transmissio	The most common transmission mode in which information bits are sent sequentially on a single data channel.

Session Layer	Layer 5 of the ISO/OSI Reference Model, concerned with the establishment of a logical connection between two application entities and with controlling the dialogue (message exchange) between them.
Shielding	The process of protecting an instrument or cable from external noise (or sometimes protecting the surrounding environment of the cable from signals within the cable.)
Short Haul Modem	A signal converter which conditions a digital signal to ensure reliable transmission over DC continuous private line metallic circuits, without interfering with adjacent pairs of wires in the same telephone cables.
Shutter	A mechanical or electronic device used to control the amount of time a light-sensitive material is exposed to radiation.
SI	International metric system of units (Système Internationale).
Sidebands	The frequency components which are generated when a carrier is frequency-modulated.
Upconverter	A device used to translate a modulated signal to a higher band of frequencies.
Sidereal Day	The period of an earth's rotation with respect to the stars.
Signal to Noise Ratio	The ratio of signal strength to the level of noise.
Signal Conditioning	Pre-processing of a signal to bring it up to an acceptable quality level for further processing by a more general purpose analog input system.
Simplex Transmission	Data transmission in one direction only.
Simultaneous Sampling	The ability to acquire and store multiple signals at exactly the same moment. Sample-to-sample inaccuracy is typically measured in nanoseconds.
Single-ended	See number of channels.
Slew Rate	This is defined as the rate at which the voltage changes from one value to another.
Smart Sensors	A transducer (or sensor) with an on-board microprocessor to pre-process input signals to the transducer. It also has the capability of communicating digitally back to a central control station.
SNA	Systems Network Architecture.
SNR	Signal to Noise Ratio.
Software Drivers	Typically a set of programs or subroutines allowing the user to control basic board functions, such as setup and data acquisition. These can be incorporated into user-written programs to create a simple but functional DAS system. Many boards come with drivers supplied.
Software Trigger	Software control of data acquisition triggering. Most boards are designed for software control.

— 53 —

SOH	Start of Header (ASCII Control-A).
Space	Absence of signal. This is equivalent to a binary zero.
Spark Test	A test designed to locate imperfections (usually pin-holes) in the insulation of a wire or cable by application of a voltage for a very short period of time while the wire is being drawn through the electrode field.
Spatial Resolution	A measure of the level of detail a vision system can display. The value, expressed in mils or inches per pixel, is derived by dividing the linear dimensions of the field of view (x and y, as measured in the image plane), by the number of pixels in the x and y dimensions of the system's imaging array or image digitizer.
Spatial Filtering	In image processing, the enhancement of an image by increasing or decreasing its spatial frequencies.
Spectral Purity	The relative quality of a signal measured by the absence of harmonics, spurious signals and noise.
Speed/Typical Throughput	The maximum rate at which the board can sample and convert incoming samples. The typical throughput is divided by the number of channels being sampled to arrive at the samples/second on each channel. To avoid false readings, the samples per second on each channel need to be greater than twice the frequency of the analog signal being measured.
Standing Wave Ratio	The ratio of the maximum to minimum voltage (or current) on a transmission line at least a quarter-wavelength long. (VSWR refers to voltage standing wave ratio)
Star	A type of network topology in which there is a central node that performs all switching (and hence routing) functions.
Statistical Multiplexer	Multiplexer in which data loading from multiple devices occurs randomly throughout time, in contrast to standard multiplexers where data loading occurs at regular predictable intervals.
STP	Shielded Twisted Pair.
Straight Through Pinning	EIA-232 and EIA-422 configuration that match DTE to DCE, pin for pin (pin 1 with pin 1, pin 2 with pin 2,etc).
Strobe	A handshaking line used to signal to a receiving device that there is data to be read.
STX	Start of Text (ASCII Control-B).
Subharmonic	A frequency that is a integral submultiple of a reference frequency.
Switched Line	A communication link for which the physical path may vary with each use, such as the public telephone network.
Sync	A synchronisation, or sync, pulse ensures that the monitor displaying the information is synchronized at regular intervals with

the device supplying the data, thus displaying the data at the right location. For example, a sync pulse would be used between a camera and a display device to reset the image to the top of the frame for the beginning of the image. The co-ordination of the activities of several circuit elements. Synchronisation Transmission in which data bits are sent at a fixed rate, with the Synchronous Transmission transmitter and receiver synchronized. Synchronized transmission eliminates the need for start and stop bits. Talker A device on the GPIB bus that simply sends information onto the bus without actually controlling the bus. Tank A circuit comprising inductance and capacitance which can store electrical energy over a finite band of frequencies. TCP/IP Transmission Control Protocol/Internet Protocol. The collective term for the suite of layered protocols that ensures reliable data transmission in an internet (a network of packet switching networks functioning as a single large network). Originally developed by the US Department of Defense in an effort to create a network that could withstand an enemy attack. TDM Time Division Multiplexer. A device that accepts multiple channels on a single transmission line by connecting terminals, one at a time, at regular intervals, interleaving bits (bit TDM) or characters (Character TDM) from each terminal. TDR Time Domain Reflectometer. This testing device sends pulses down the cable and enables the user to determine cable quality (distance to defect and type of defect) by the reflections received back. **Temperature Rating** The maximum, and minimum temperature at which an insulating material may be used in continuous operation without loss of its basic properties. Signals from the hardware to the display device are only interpreted Text Mode as text characters. Thresholding The process of defining a specific intensity level for determining which of two values will be assigned to each pixel in binary processing. If the pixel's brightness is above the threshold level, it will appear in white in the image; if it is below the threshold level, it will appear black. TIA Telecommunications Industry Association. Time Division The process of transmitting multiple signals over a single channel by multiplexing taking samples of each signal in a repetitive time sequenced fashion.

Time Sharing	A method of computer operation that allows several interactive terminals to use one computer.
Time Domain	The display of electrical quantities versus time.
Token Ring	Collision free, deterministic bus access method as per IEEE 802.2 ring topology.
ТОР	Technical Office Protocol. A user association in USA which is primarily concerned with open communications in offices.
Topology	Physical configuration of network nodes, e.g. bus, ring, star, tree.
Transceiver	A combination of transmitter and receiver.
Transducer	Any device that generates an electrical signal from real-world physical measurements. Examples are LVDTs, strain gauges, thermocouples and RTDs. A generic term for sensors and their supporting circuitry.
Transient	An abrupt change in voltage of short duration.
Transmission Line	One or more conductors used to convey electrical energy from one point to another.
Transport Layer	Layer 4 of the ISO/OSI Reference Model, concerned with providing a network independent reliable message interchange service to the application oriented layers (layers 5 through 7).
Trigger	A rising edge at an 8254 timer/counter's gate input.
Trunk	A single circuit between two points, both of which are switching centres or individual distribution points. A trunk usually handles many channels simultaneously.
Twisted Pair	A data transmission medium, consisting of two insulated copper wires twisted together. This improves its immunity to interference from nearby electrical sources that may corrupt the transmitted signal.
UART	Universal Asynchronous Receiver/Transmitter. An electronic circuit that translates the data format between a parallel representation, within a computer, and the serial method of transmitting data over a communications line.
UHF	Ultra High Frequency.
Unbalanced Circuit	A transmission line in which voltages on the two conductors are unequal with respect to ground e.g. a coaxial cable.
Unipolar Inputs	When set to accept a unipolar signal, the channel detects and converts only positive voltages. (Example: 0 to $+10$ V).
Unloaded Line	A line with no loaded coils that reduce line loss at audio frequencies.
Upconverter	A device used to translate a modulated signal to a higher band of frequencies.

Uplink	The path from an earth station to a satellite.
USRT	Universal Synchronous Receiver/Transmitter. See UART.
UTP	Unshielded Twisted Pair.
V.35	CCITT standard governing the transmission at 48 kbps over 60 to 108 kHz group band circuits.
VCO	Voltage controlled oscillator. Uses variable DC applied to tuning diodes to change their junction capacitances. This results in the output frequency being dependent on the input voltage.
Velocity of Propagation	The speed of an electrical signal down a length of cable compared to speed in free space expressed as a percentage.
VFD	Virtual Field Device. A software image of a field device describing the objects supplied by it eg measured data, events, status etc which can be accessed by another node on the network.
VGA	Video Graphics Array. This standard utilizes analog signals only (between 0 and 1 V) offering a resolution of 640 by 480 pixels, a palette of 256 colors out of 256000 colors and the ability to display 16 colors at the same time.
VHF	Very High Frequency.
Vidicon	A small television tube originally developed for closed-circuit television. It is about one inch (2.54 cm) in diameter and five inches (12.7 cm) long. Its controls are relatively simple and can be operated by unskilled personnel. The Vidicon is widely used in broadcast service.
Volatile Memory	A storage medium that loses all data when power is removed.
Voltage Rating	The highest voltage that may be continuously applied to a wire in conformance with standards of specifications.
VRAM	Volatile Random Access Memory. See RAM.
VSD	Variable Speed Drive.
VT	Virtual Terminal.
WAN	Wide Area Network.
Waveguide	A hollow conducting tube used to convey microwave energy.
Wedge Filter	An optical filter so constructed that the density increases progressively from one end to the other, or angularly around a circular disk.
Word	The standard number of bits that a processor or memory manipulates at one time. Typically, a word has 16 bits.
X.21	CCITT standard governing interface between DTE and DCE devices for synchronous operation on public data networks.

X.25 Pad	A device that permits communication between non X.25 devices and the devices in an X.25 network.
X.25	CCITT standard governing interface between DTE and DCE device for terminals operating in the packet mode on public data networks.
X.3/X.28/X.29	A set of internationally agreed standard protocols defined to allow a character oriented device, such as a visual display terminal, to be connected to a packet switched data network.
X-ON/X-OFF	Control characters used for flow control, instructing a terminal to start transmission (X-ON) and end transmission (X-OFF).



Appendix B

ASCII Tables

ASCII (American Standard Code for Information Interchange) is the most commonly used character encoder used in data communications.

An example of its use is

Character	Binary	Hex
1	011 0001	31
W	101 0111	57

 Table B.1

 The conversion between ASCII and Binary and Hex

Table B.2 shows the code for each character in hexadecimal and binary values. It takes the form of a matrix in which the Most Significant Bits (MSB) are along the top and the Least Significant Bits (LSB) are down the left hand side.

LSB/MSB	HEX	0	1	2	3	4	5	6	7
HEX	BIN	000	001	010	011	100	101	110	111
0	0000	(NUL)	(DLE)	Space	0	a	Р	'p	
1	0001	(SOH)	(DC1)	!	1	А	Q	а	q
2	0010	(STX)	(DC2)	"	2	В	R	b	r
3	0011	(ETX)	(DC3)	#	2	С	S	с	S
4	0100	(EOT)	(DC4)	\$	4	D	Т	d	t
5	0101	(ENQ)	(NAK)	%	5	Е	U	e	u
6	0110	(ACK)	(SYN)	&	6	F	V	f	V
7	0111	(BEL)	(ETB)	1	7	G	W	g	W
8	1000	(BS)	(CAN)	(8	Н	Х	h	X
9	1001	(HT)	(EM))	9	Ι	Y	i	У
А	1010	(LF)	(SUB)	*	:	J	Ζ	j	Z
В	1011	(VT)	(ESC)	+	• •	K	[k	{
С	1100	(FF)	(FS)	,	,	L	/	1	
D	1101	(CR)	(GS)	-	+	М]	m	}
Е	1110	(SO)	(RS)	•	•	N	^	n	~
F	1111	(SI)	(US)	/	?	0	_	0	DEL

Table B.2 ASCII Table

Appendix C

EIA Communication Interface Standards

Parameter	RS-232 (V28) EIA-232 E	RS-423	RS-422	RS-485
Mode of Operation	Single-ended	Single-ended	Differential	Differential
Permitted number of				
drivers on line	1	1	1	32
Permitted number of				
receivers on line	1	10	10	32
Max. cable length (m)	15(or max.	1200	1200	1200
Ca	apacitance) 2500p	ρF		
Max. data rate (baud)	20 k	100 k	10 M	10 M
Max common mode				
voltage (V)	±25	± 6	+6 to -0.25	+12 to -7
Driver output signal (V)				
Min. / Max.	\pm 5 / \pm 25	\pm 3.6 / \pm 6.0	$\pm 2 / \pm 6.0$	$\pm 1.5 / \pm 6.0$
Driver Load (Ω)	3 kΩ	450 min	100	60
Receiver input resistance	(kΩ) 3 to 7	>4	>4	>12
Receiver sensitivity	± 3.0 V	$\pm 200 mV$	$\pm 200 mV$	$\pm 200 mV$
			-7V Vcm 7V	7-7V□ Vcm□12V

Appendix D Units and Abbreviations

Unit Symbol	Unit	Quantity
m	metre	length
kg	kilogram	mass
S	second	time
A	ampere	electric current
К	kelvin	thermodynamic temp
cd	candela	luminous intensity

Table A.1 SI units

Symbol	Prefix	Factor by which unit is multiplied
Т	tera	1012
G	giga	10 ⁹
М	mega	10 ⁶
k	kilo	10 ³
h	hecto	10 ²
da	deca	10
d	deci	10 ⁻¹
с	centi	10 ⁻²
m	milli	10 ⁻³
μ	micro	10 ⁻⁶
n	nano	10 ⁻⁹
р	pico	10 ⁻¹²

Table A.2 Decimal Prefixes

— 61 —

Quantity	Unit	Symbol	Equivalent
plane angle	radian	rad	-
force	newton	Ν	kg m/s²
work, energy heat	joule	J	N m
power	watt	W	J/s
frequency	hertz	Hz	s-1
viscosity: kinematic	-	m²/s	10 c St (Centistoke)
dynamic	-	Ns/m ² or Pa s	10 ³ cP (Centipoise)
pressure	-	Pa or N/m ²	pascal, Pa

Table A.3Supplementary and Derived Units

	Quantity	Electrical unit	Symbol	Derived unit
	potential	volt	V	W/A
	resistance	ohm	Ω	V/A
	charge	coulomb	С	A s
	capacitance	farad	F	A s/V
ele	ctric field strength	-	V/m	-
ele	ectric flux density	-	C/m ²	-

Table A.4Supplementary and Derived Unit (electrical)

Quantity	Magnetic unit	Symbol	Derived unit
magnetic flux	weber	Wb	V s = Nm/A
inductance	henry	Н	$V s/A = Nm/A^2$
magnetic field strength	-	A/m	-
magnetic flux density	tesla	Т	$Wb/m^{2} = (N)/(Am)$

Table A.5Supplementary and Derived Units (magnetic)

— 62 —

Name	Symbol	Equivalent
Avogadro's number	Ν	6.023 x 10 ²⁶ /(kg mol)
Bohr magneton	В	9.27 x 10 ⁻²⁴ A m 25 ²
Boltzmann's constant	k	1.380 x 10 ⁻²³ J/k
Stefan-Boltzmann constant	d	5.67 x 10 ⁻⁸ W/(m ² K ⁴)
Characteristic impedance of free space	Zo	$(\mu_o/E_o)^{1/2}=120\pi\Omega$
Electron volt	eV	1.602 x 10 ⁻¹⁹ J
Electron charge	е	1.602 x 10 ⁻¹⁹ C
Electronic rest mass	m _e	9.109 x 10 ⁻³¹ kg
Electronic charge to mass ratio	e/m _e	1.759 x 10 ¹¹ C/kg
Faraday constant	F	9.65 x 10 ⁷ C/(kg mol)
Permeability of free space	μο	4π x 10 ⁻⁷ H/m
Permittivity of free space	Eo	8.85 x 10 ⁻¹² F/m
Planck's constant	h	6.626 x 10 ⁻³⁴ J s
Proton mass	m _p	1.672 x 10 ⁻²⁷ kg
Proton to electron mass ratio	m _p /m _e	1835.6
Standard gravitational acceleration	g	9.80665 m/s² 9.80665 N/kg
Universal constant of gravitation	G	6.67 x 10 ⁻¹¹ N m ² /kg ²
Universal gas constant	R _o	8.314 kJ/(kg mol K)
Velocity of light in vacuo	С	2.9979 x 10 ⁸ m/s
Volume of 1 kg mol of ideal gas at 1 atm & 0°C	-	22.41 m ³
Temperature	0C	5/9(⁰ F - 32)
Temperature	К	5/9(⁰ F + 459.67) 5/9 ⁰ R ⁰ C + 273.15

Table A.6Physical Constants

Appendix E Commonly used Formulae

Symbols used in formulae

The symbols described in the following table are used in the formulae shown in the next section

Symbol	Description	SI Unit
а	Velocity of sound	ms⁻¹
а	Acceleration	ms ⁻²
А	Area	m²
с	Velocity of light	ms⁻¹
С	Capacitance	F
D	Diameter	m
E	Young's modulus	Nm ⁻²
ΔE	Energy difference	J
f	Frequency	Hz
F	Force	Ν
н	Magnetising force magnetic field strength	Am ⁻¹
1	Current	А
	Moment of inertia	kgm ²
k	Radius of gyration	m
kp	Pitch factor of winding	-
I	Length	m
I	Length of conductor	m
L	Inductance	Н
m	Mass	kg
М	Momentum	kg.m.s ⁻¹
n	Speed of rotation	rpm
N	Number of turns	
р	Number of pole pairs	-

Symbol	Description	SI Unit
Q	Volumetric flow rate	m ³ s ⁻¹
Q	Charge	С
R	Resistance	Ω
S	Fractional slip	-
t	Time	S
Т	Time Factor	-
Т	Torque	Nm
т	Temperature (absolute)	К
ΔΤ	Temperature difference	°C
u	Velocity	ms⁻¹
v	Velocity	ms ⁻¹
V	Voltage	V
V	Volume	m ³
х	Distance (variables as in dx)	m
Z	Number of armature conductors	-
Z	Impedance	Ω
а	Coefficient of volumetric expansion	Hm/(mK)
а	Resistance coefficient	Ω K ⁻¹
b	Coefficient of volumetric expansion	K ⁻¹
e _o	Permittivity of free space	Fm⁻¹
e _o	Permittivity-relative	-
m _o	Permeability of free space	Hm⁻¹
m _r	Permeability-relative	-
r _o	Resistivity	Ω m ³
r	Density	kgm ³
S	Stefan-Boltzmann constant	Wm ⁻² K ⁻⁴
φ	Angle	radians
F	Magnetic flux, flux per pole	Wb
W	Angular Velocity	rad.s ⁻¹
Wn	Natural frequency	rad.s ⁻¹
Wo	Natural frequency	rad.s ⁻¹
w _d	Damped natural frequency	rad.s ⁻¹

Formulae

Ohm's Law (DC version)

$$V = IR$$

$$I = \frac{V}{R}$$

Ohm's Law (AC version)

$$\underline{V} = \underline{I} \cdot \underline{Z}$$

$$\sum_{j=0}^{N} I_{j} = 0$$

Power

$$P_{dc} = VI = I^2 R = \frac{V^2}{R}$$

$$P_{ac} = \operatorname{Re}(\underline{V} \cdot \underline{I}) = VI \cos\phi$$

Resistance

Resistors in series:

$$R = R_1 + R_2 + R_3 + \dots$$

Resistors in parallel:

$$R = \frac{1}{\frac{1}{R_1} + \frac{1}{R_2} + \frac{1}{R_3} \dots}$$

Inductance

$$V = -L\frac{dI}{dt}$$
$$I = -\int \frac{V}{L} dt$$
$$L = N^{2} \mu_{0} \mu_{r} \frac{a}{l}$$

for LR circuit decay, stored energy is calculated as follows:

$$Energy = \frac{1}{2}LI^2$$

Capacitance

$$Q = CV = \int i dt$$

$$i = \frac{dQ}{dt} = C\frac{dV}{dt}$$

— *67* —

For n parallel plates:

$$C = \varepsilon_o \varepsilon_r (n-1) \frac{a}{d}$$
$$\varepsilon_o = 8.85 x 10^{-12} Fm^{-1}$$

For RC circuit discharge:

$$i = -Ie^{\frac{1}{RC}}$$

Stored energy:

$$i = \frac{1}{2} \varepsilon_o \varepsilon_r a \left(\frac{V}{x}\right)^2$$

For capacitors in series:

$$C_{total} = \frac{1}{\frac{1}{C_1} + \frac{1}{C_2} + \frac{1}{C_3} \dots}$$

For capacitors in parallel:

$$C_{total} = C_1 + C_2 + C_3 + \dots$$

— *68* —

Electrostatics

$$F = \frac{Q_1 Q_2}{4\pi \varepsilon_0 r^2}$$

$$\underline{F} = e \cdot \underline{E} = -e\Delta V$$

1.1

$$\underline{D} = e_o e_r \underline{E}$$

Electromagnetism

$$E = -N \frac{d\phi}{dt}$$
$$B = \mu_o \frac{1}{2\pi r}$$

$$F = BII$$
$$F = \mu_o I_1 I_2 \frac{1}{2\pi d}$$

$$\frac{dH}{dl} = \frac{I\sin\alpha}{4\pi x^2}$$

For a solenoid:

$$H = \frac{NI}{l}$$

Magnetism

 $H = \frac{B}{\mu_0 \mu_r}$

For a magnetic circuit:

 $B = \frac{\phi}{A}$

Stored energy density:

Energy =
$$\frac{1}{2}$$
 HB = $\frac{1}{2} \frac{B^2}{\mu_0}$

AC Circuits

$$V_{max} = \frac{1}{\sqrt{2}} V_{peak}$$

abs (Z) = {
$$R^{2} + (\omega L - \frac{1}{\omega C})^{2}$$
}
Z = R + j ω L + $\frac{1}{j\omega C}$
Cos $\phi = \frac{R}{Z}$

At resonance the following relationship holds true:

$$w = w_o = \frac{1}{\sqrt{LC}}$$

The Q factor can be calculated as follows:

$$Q_{factor} = w_o \frac{L}{R}$$

Sound

Note that decibels are not units as such but a ratio of voltages, currents and power, for example:

$$dB = 10 \log_{10} \frac{P_1}{P_2}$$

where: P_1 , P_2 are the power levels:

$$dB = 20 \log_{10} \frac{V_1}{V_2}$$

For differing input and output impedances the following formula is appropriate:

$$dB = 20 \log_{10} \frac{V_1}{V_2} + 10 \log_{10} \frac{Z_2}{Z_1}$$

Where

 V_1 , V_2 are the voltages Z_1 , Z_2 are the impedances.